



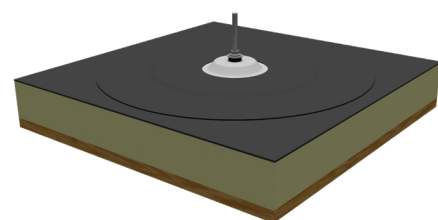

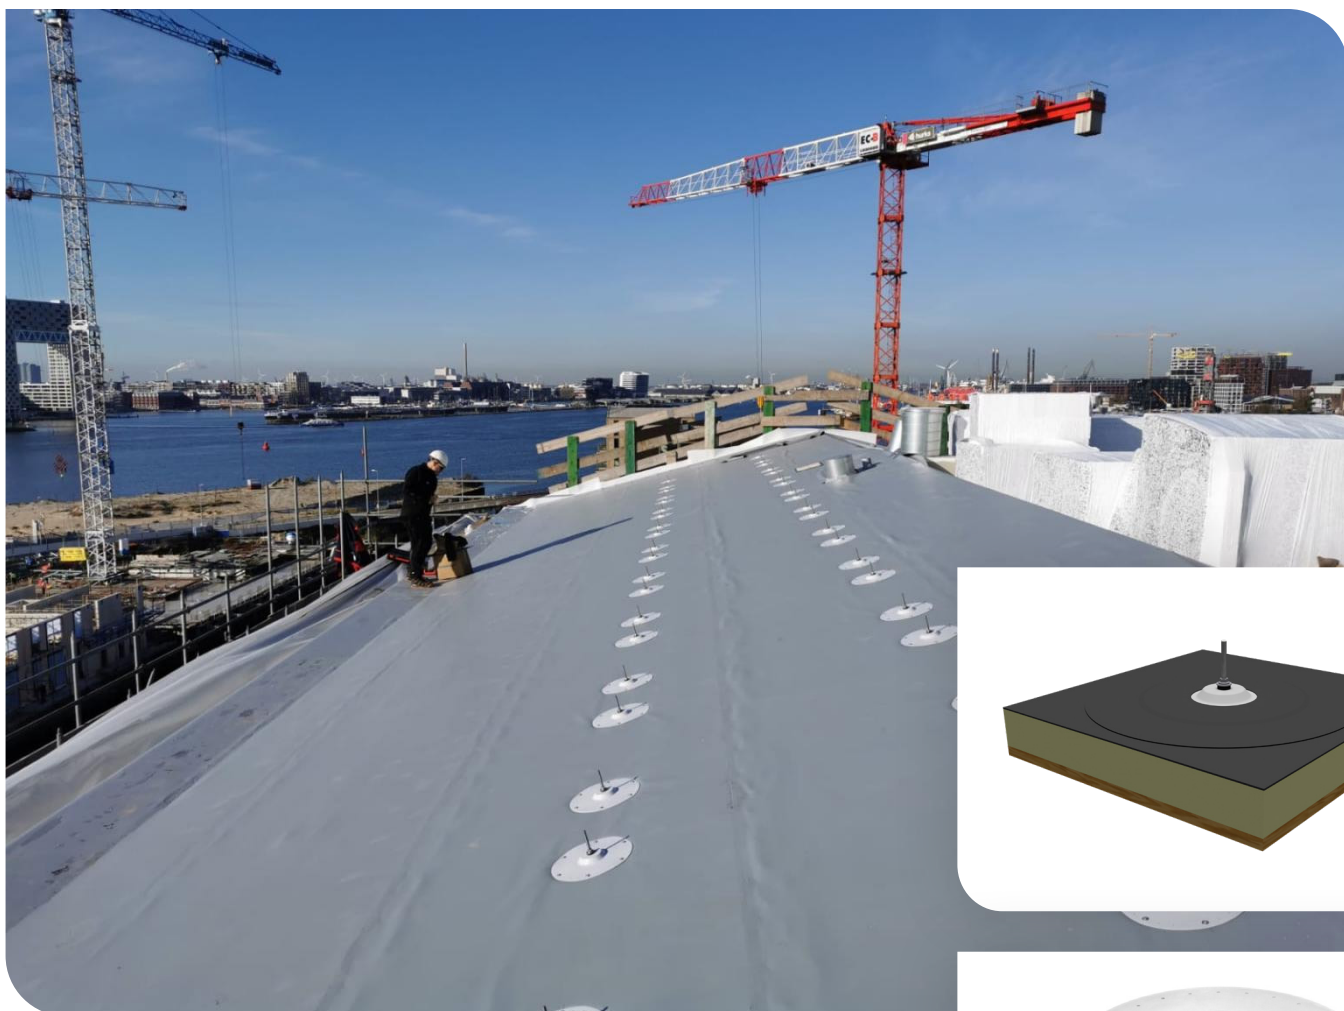

Installation manual














ValkSolarFix


Mounting in wooden roof with screws
for flat and pitched roofs

Installation manual ValkSolarFix / Mounting in wooden roof with screws

Needed tools			
Wrench 15 + 17		Drill	
Fixation tool 15 L=200 mm		Torx Bit TX25 25 mm	


Separate components		
Article number	Description	
747600	ValkSolarFix Low h=20mm	
747601	ValkSolarFix Low h=20mm - PVC coated* * On request only, not in stock as standard.	
747605	ValkSolarFix Low - PVC cover	
747604	ValkSolarFix - Ss. mounting set M10 + sealing ring	
747630	ValkSolarFix - Roof screws 4,8x60mm* - Wood 8x * Height from top edge of roof covering to top edge of wooden underlayment: max 15mm	
747631	ValkSolarFix - Roof screws 4,8x90mm* - Wood 8x * Height from top edge of roof covering to top edge of wooden underlayment: max 45mm	
747632	ValkSolarFix - Roof screws 4,8x140mm* - Wood 8x * Height from top edge of roof covering to top edge of wooden underlayment: max 95mm	
747633	ValkSolarFix - Roof screws 4,8x240mm* - Wood 8x * Height from top edge of roof covering to top edge of wooden underlayment: max 195mm	
747634	ValkSolarFix - Roof screws 4,8x280mm* - Wood 8x * Height from top edge of roof covering to top edge of wooden underlayment: max 235mm	
747635	ValkSolarFix - Roof screws 6,3x330mm* - Wood 8x * Height from top edge of roof covering to top edge of wooden underlayment: max 285mm	
747695	ValkSolarFix fixation key 15 L-200mm	

1 ValkSolarFix + SS mounting set + seal

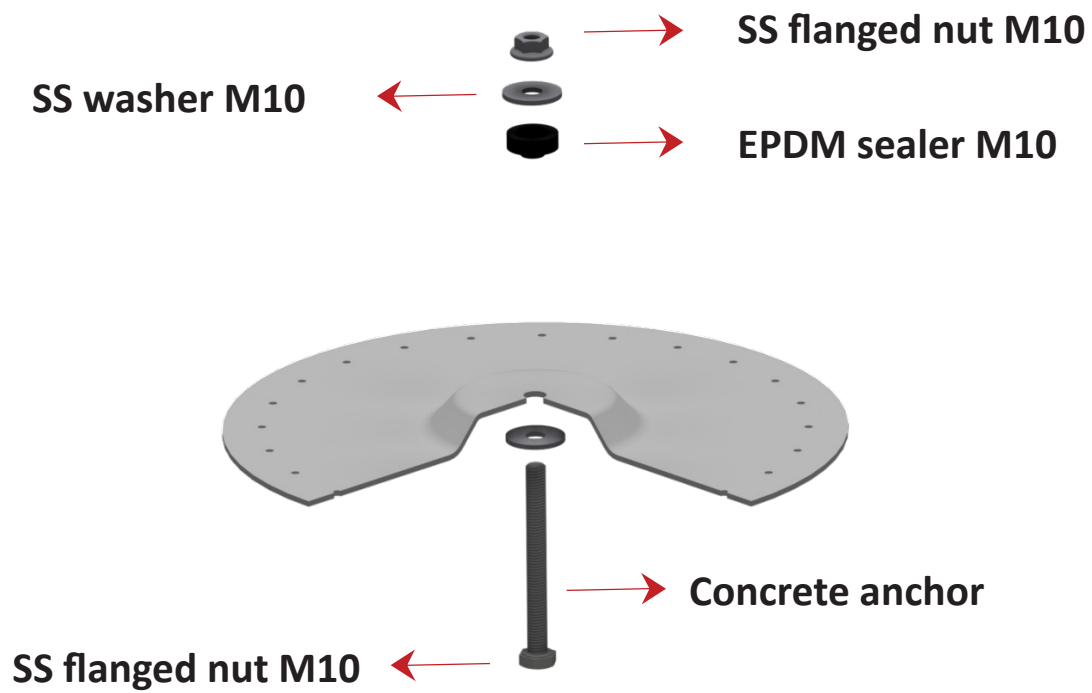


2

1 Nm
15 + 17

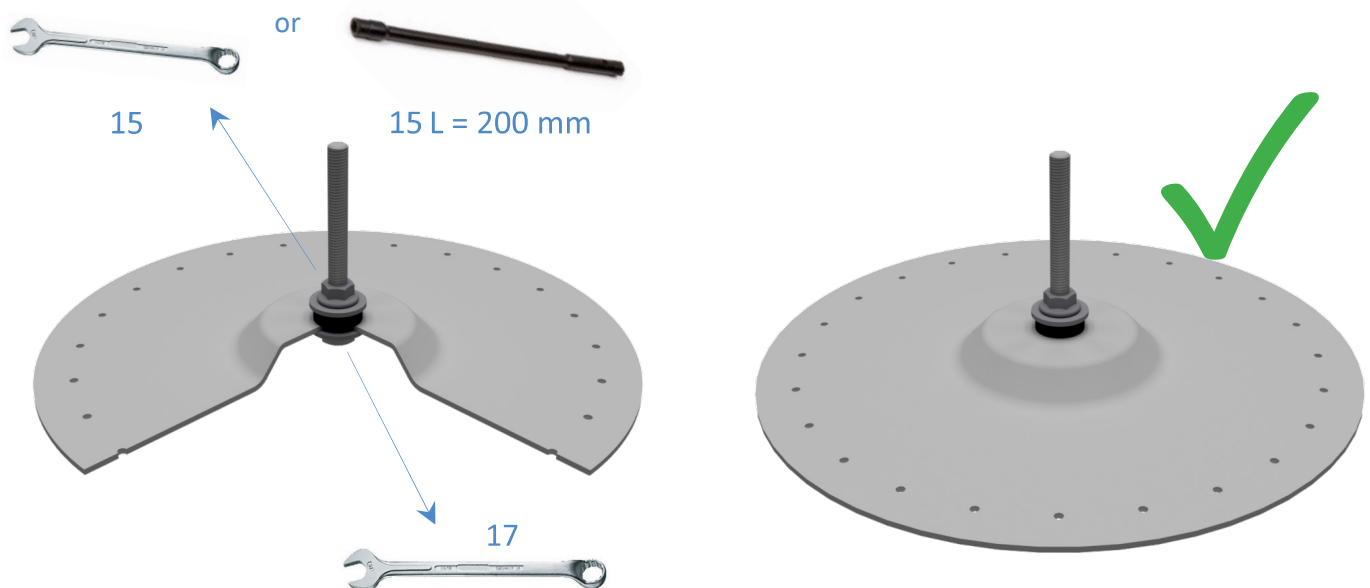


3

Min. thickness wooden
underlayment or OSB
18mm

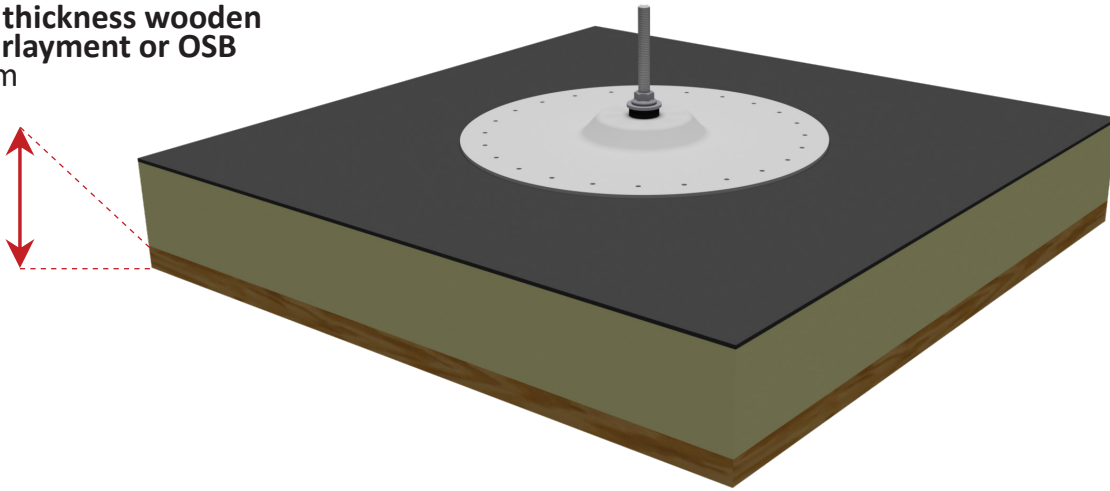


Recommended pierce length*
20mm

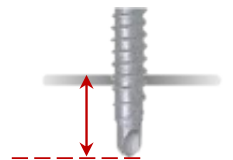

4

Needed amount of screws*
- 8 separated over the holes


Height from top edge of
roof covering to top edge of
wooden underlayment: **max
285mm**

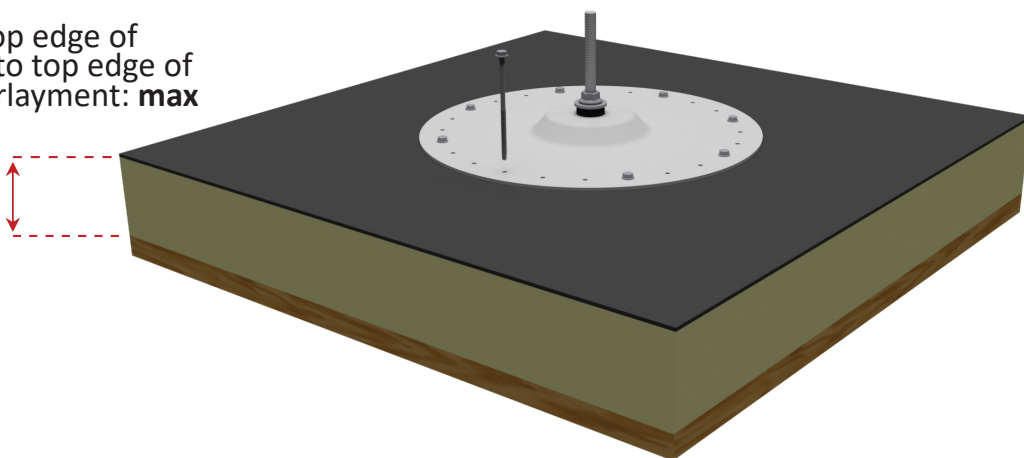

* See type of screws at the first page of this manual


5

Use socket wrench 8mm

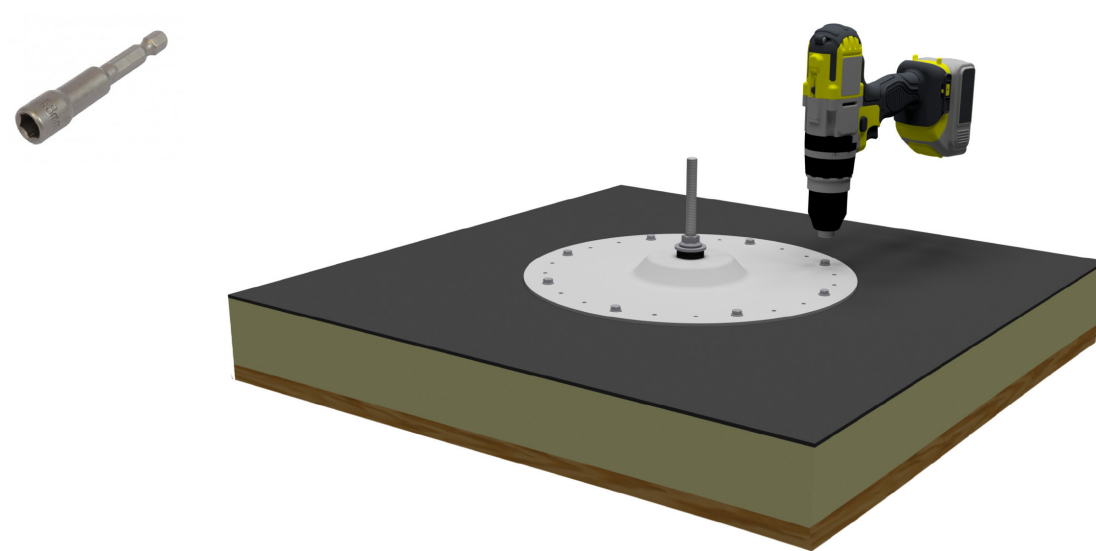


6

Advice installation membrane:

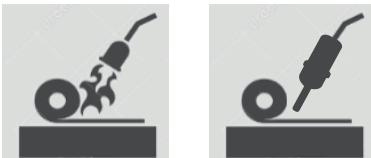

Advice size rosette:
- 540mm outer size
- 130mm inner size

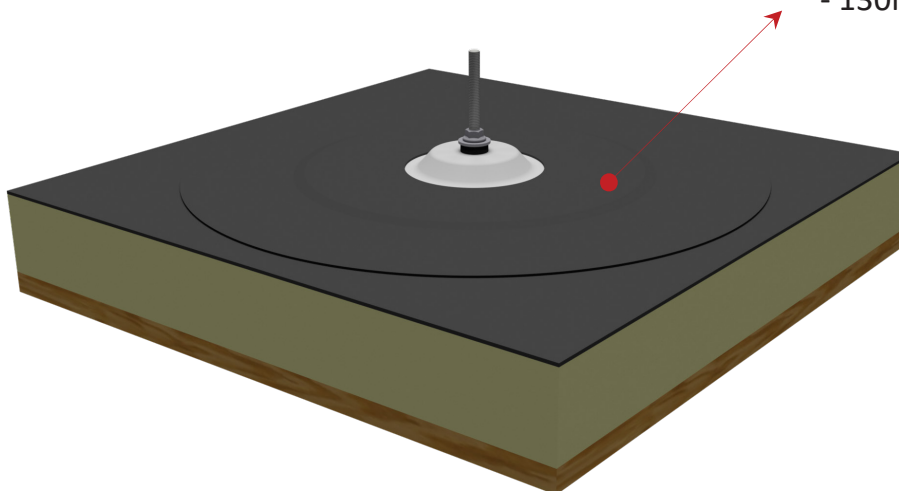

**For the watertight finishing of the consoles please contact your certified roofer.
Advice: first degrease the ValkSolarFix before making a watertight seal.**