



Installation manual

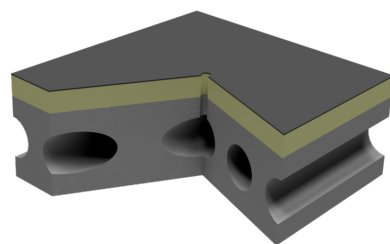


ValkSolarFix

Mounting in hollow concrete roof with concrete anchor
for flat and pitched roofs


Needed tools			
Wrench 15		Concrete drill	
Fixation tool 15 L=200 mm		Drill Ø16mm	
Fixation tool 17 L=500 mm			

Separate components		
Article number	Description	
747600	ValkSolarFix Low h=20mm	
747601	ValkSolarFix Low h=20mm - PVC coated* * On request only, not in stock as standard.	
747605	ValkSolarFix Low - PVC cover	
747610	ValkSolarFix - SS concrete anchor M10 L=400mm* * Height from top edge of roof covering to top edge of concrete: max 225mm	
747611	ValkSolarFix - SS concrete anchor M10 L=500mm* * Height from top edge of roof covering to top edge of concrete: max 325mm	
747695	ValkSolarFix fixation tool 15 L-200mm	
747696	ValkSolarFix fixation tool 17 L-500mm	



1 ValkSolarFix + SS concrete anchor

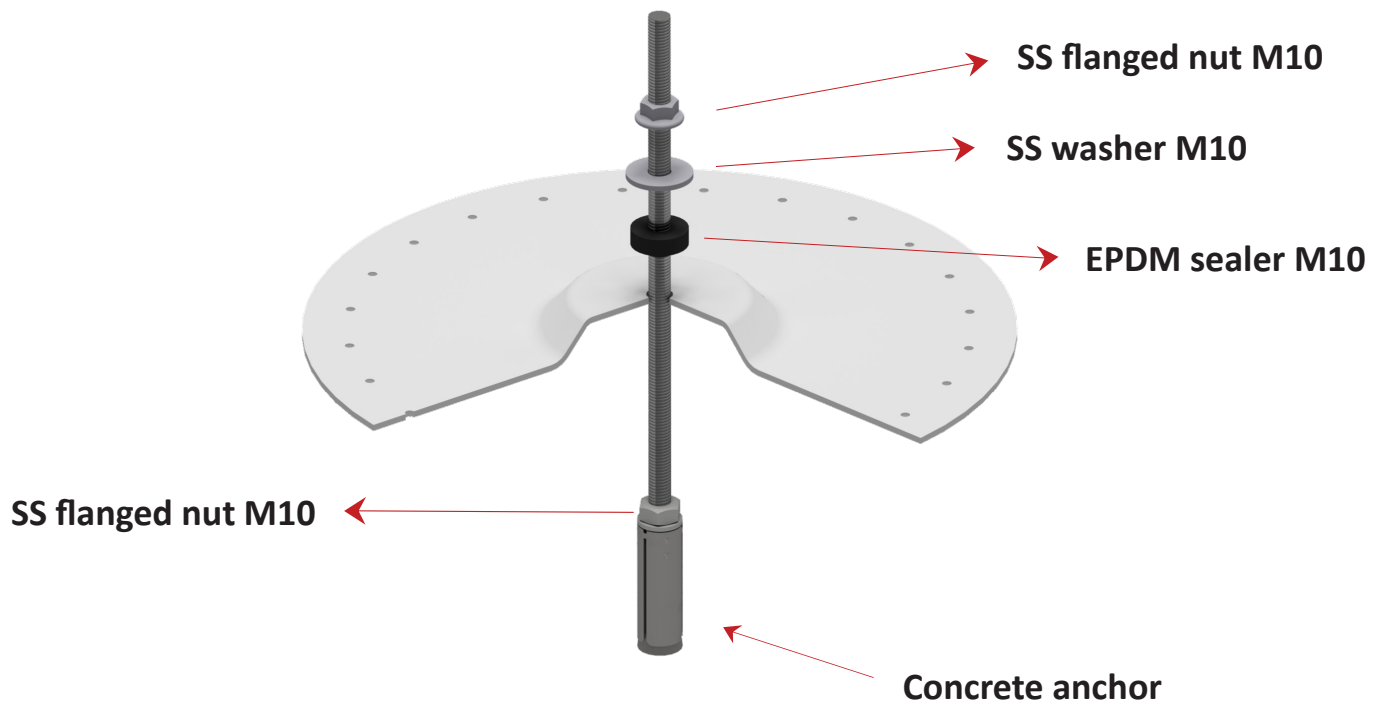

2

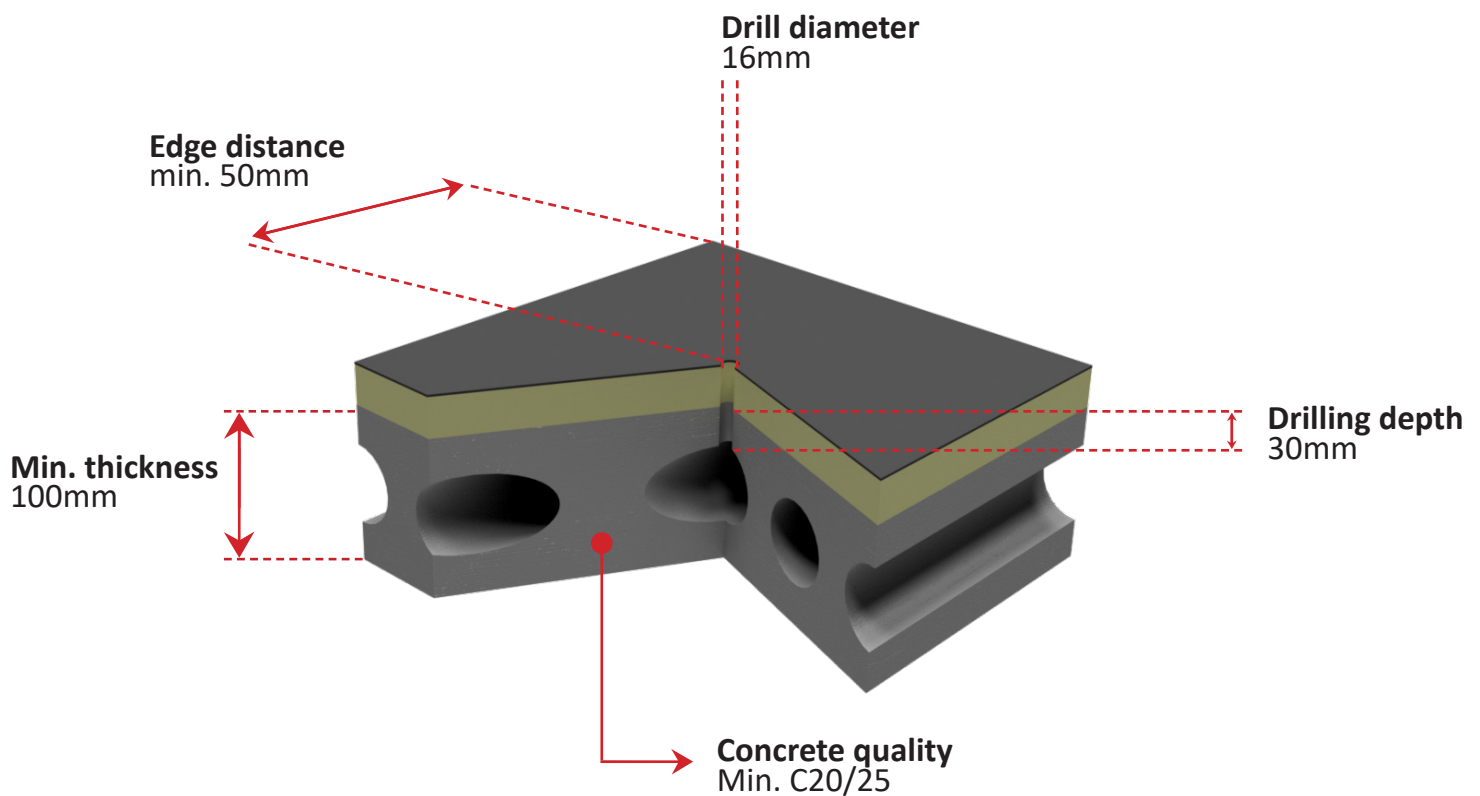


3

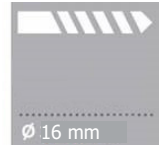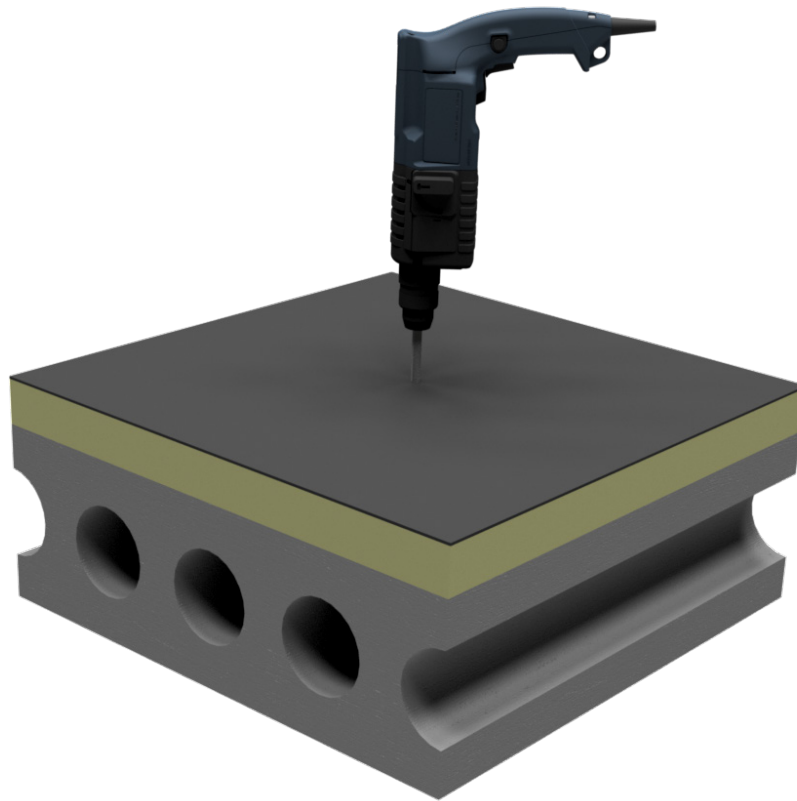



4



17 L = 500 mm

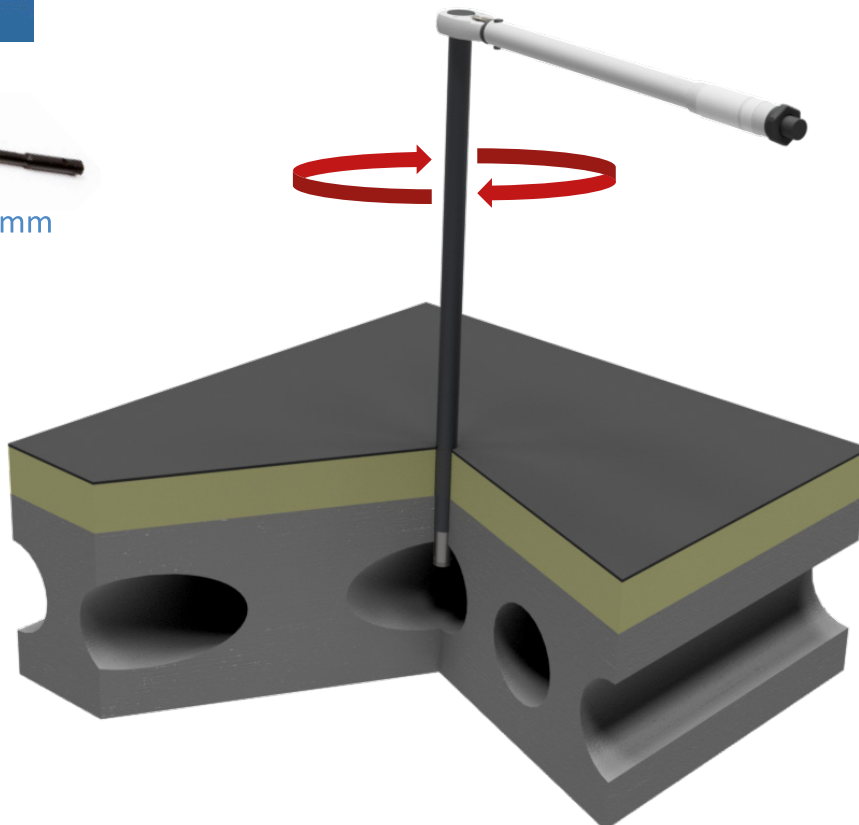


5

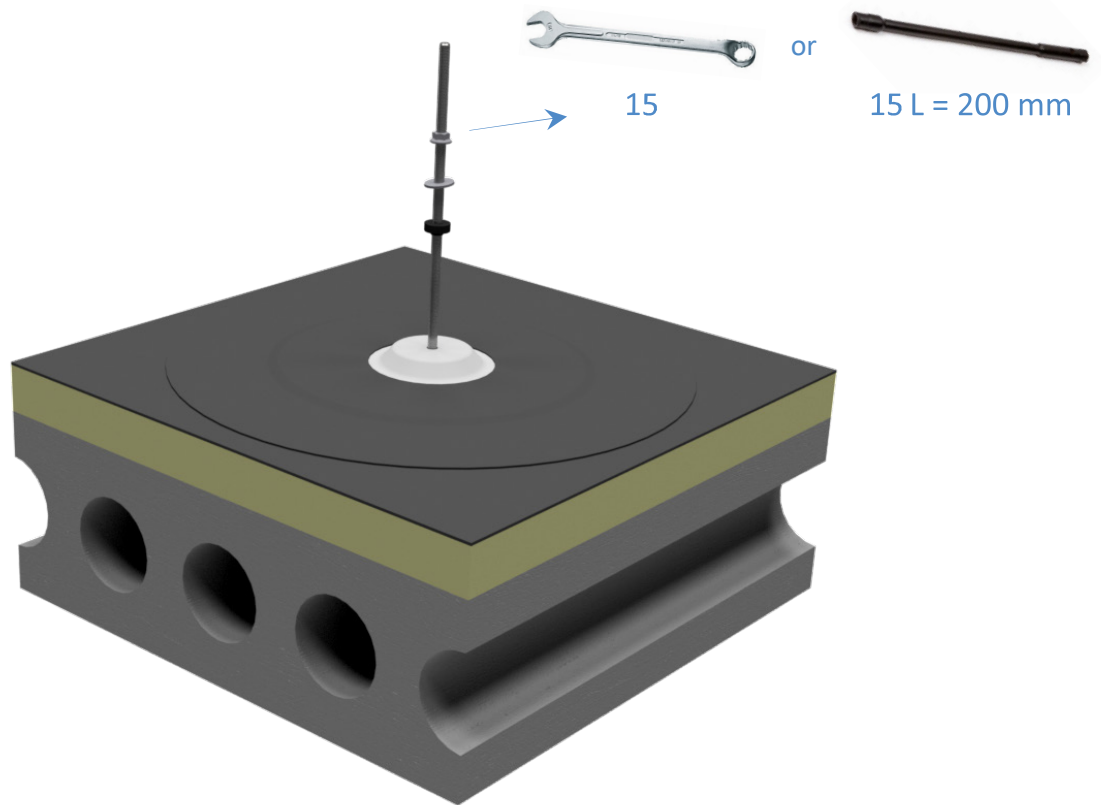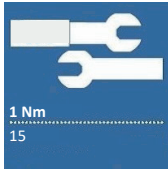

6

Advice installation membrane:

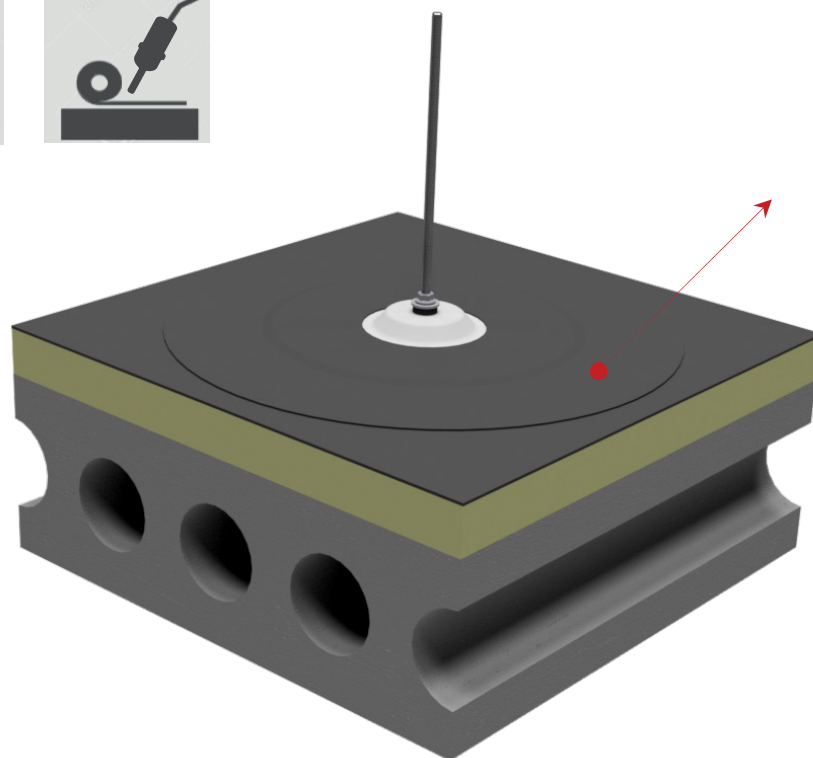

Advice size rosette:
- 540mm outer size
- 130mm inner size

**For the watertight finishing of the consoles please contact your certified roofer.
Advice: first degrease the ValkSolarFix before making a watertight seal.**