



VAN DER VALK

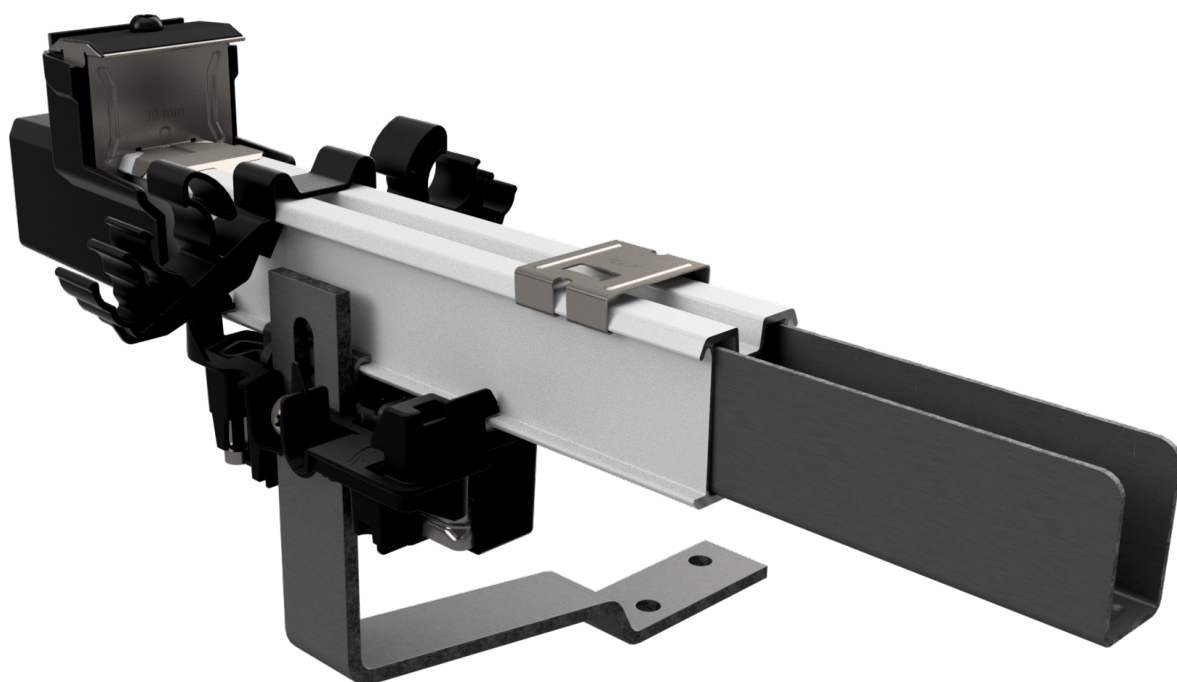

Quick Guide




ValkAce+

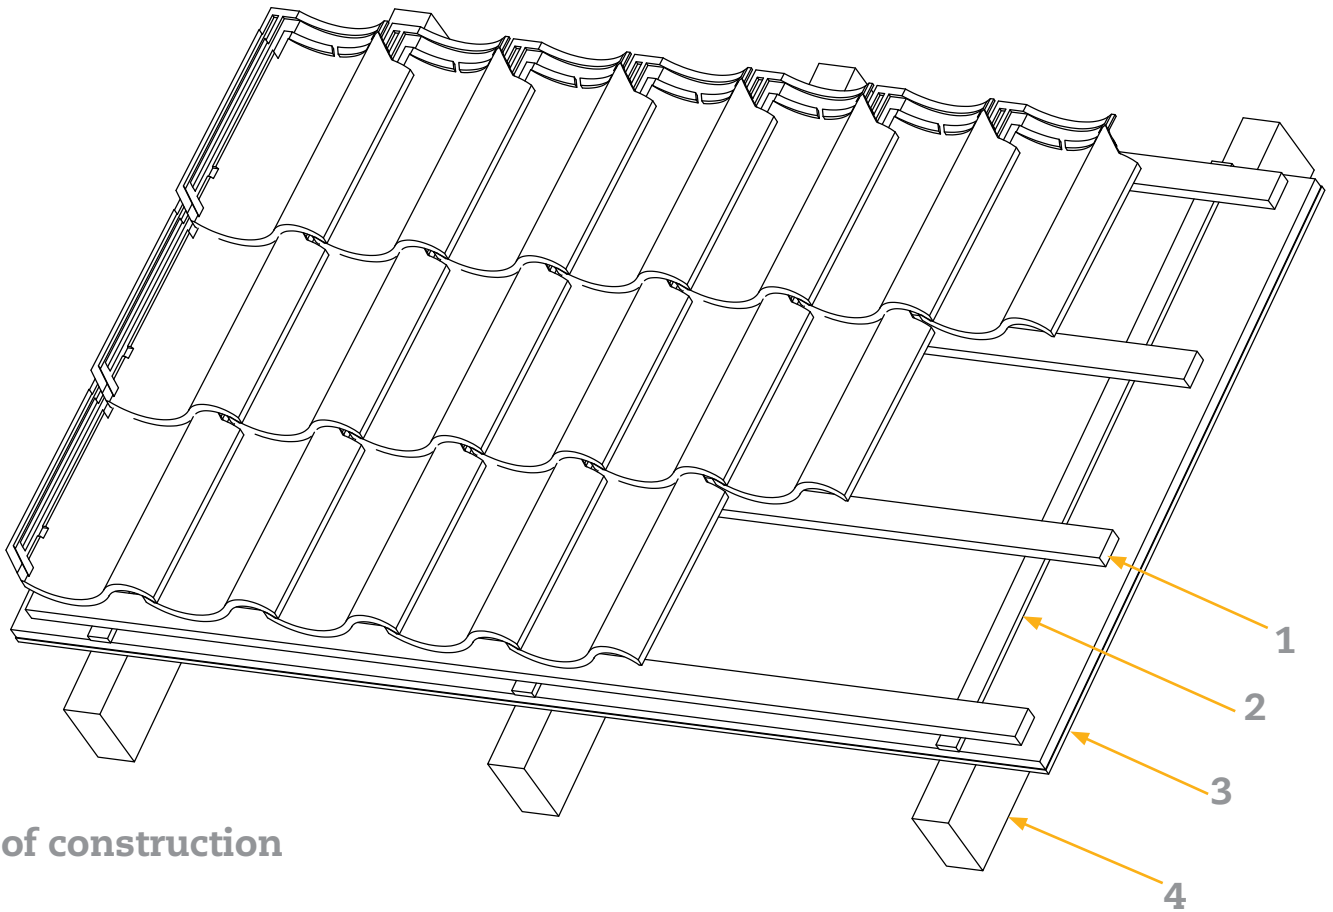


Roof construction

1. Purlins
2. Battens
3. Roof boarding
4. Rafter


Tools

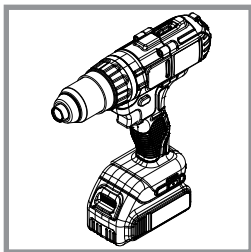


Drill

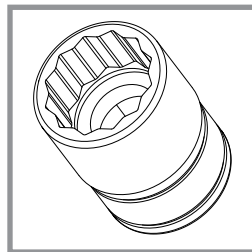

Socket 13mm

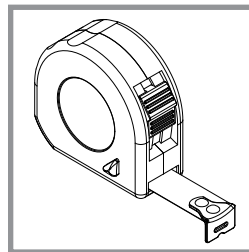


Measuring tape

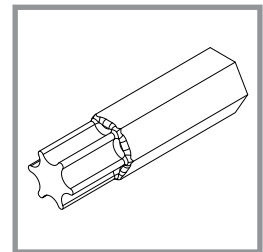


Torx bit T-30


ValkAce+ Roof hooks

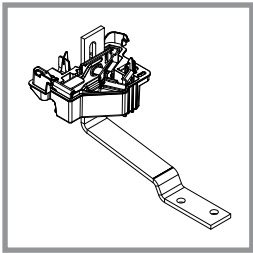


747503
ValkAce+
Smartline roof hook

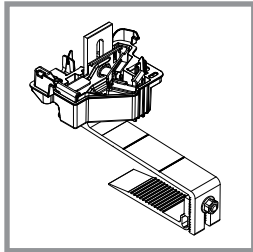


729503
ValkAce+
Slimline roof hook
- adjustable

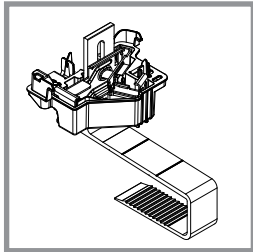

729507
ValkAce+
Slimline roof hook

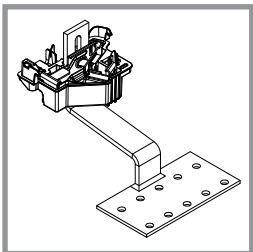


747505
ValkAce+
Strongline Heavy
Duty roof hook

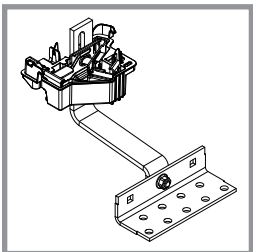


747507
ValkAce+
Strongline roof hook
- adjustable


ValkAce+ Clamps & profiles

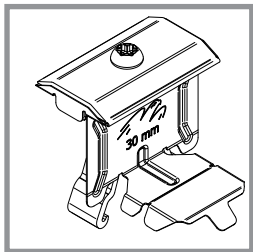


770230 (30mm)
ValkGrip

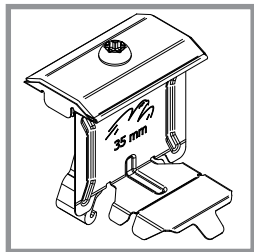


770235 (35mm)
ValkGrip

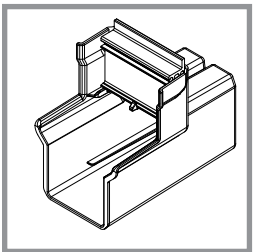

771030
ValkAce+
Endcap - black

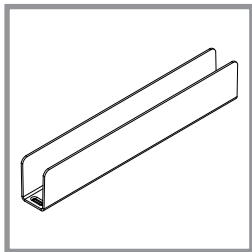


749502
ValkAce
Profile coupling

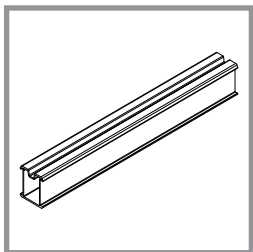


7019...*
ValkAce profile
*see table


Profiel length	Art no.
1220mm	701901220
2370mm	701902370
3520mm	701903520
4670mm	701904670
5820mm	701905820

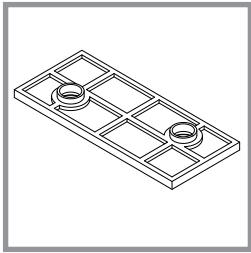


739003
Plastic shim 3mm

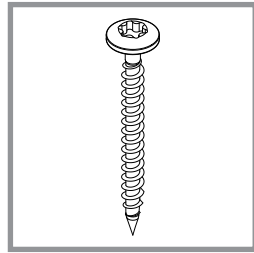


773360
SS torx-screw
5,5x58mm - T30

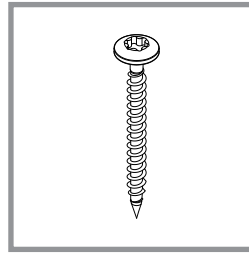

773840
SS torx-screw
5,5x38mm - T30

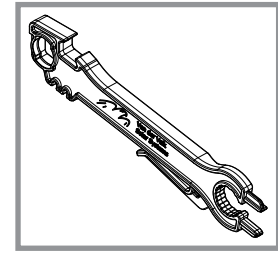


739065
ValkAce - Disassembly
tool

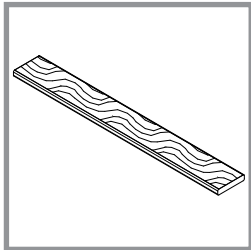


75400730
Construction wood L=730mm


ValkAce+ Cable managment

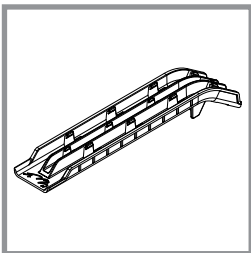


739063
Plastic cable entry roof
tiles

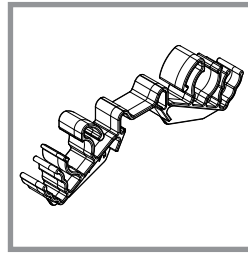


739061
ValkAce
Cable and connector clip

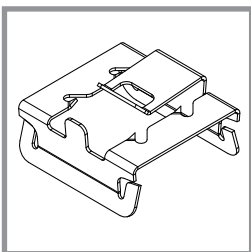


739062
ValkAce
Micro/optimizer-clip
Light
(tot 8kg)

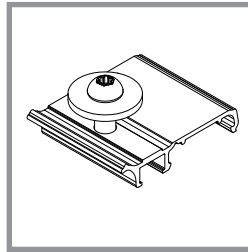


721440
ValkAce
Micro/optimizer clamp
Heavy

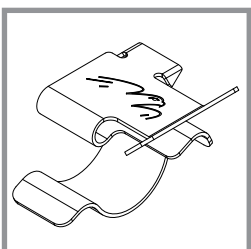

738201
Ss. Connector clamp

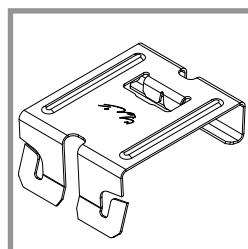


739064
ValkAce
Earthing clamp

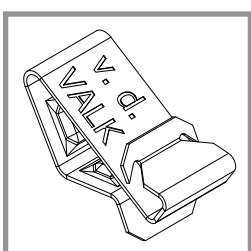


732001
SS cable clamp small

ValkAce+ Smartline

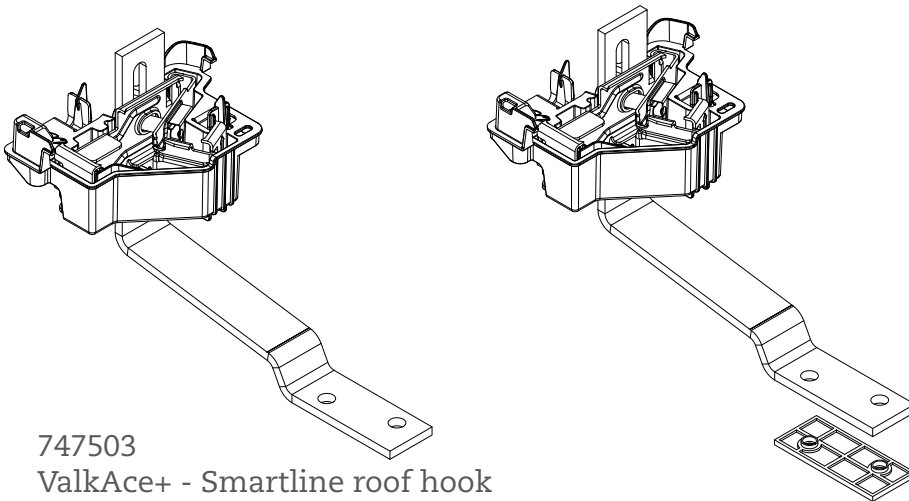


747503
ValkAce+ - Smartline roof hook


Required parts

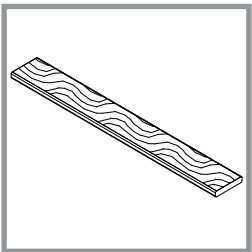

75400730
Construction
wood L=730mm

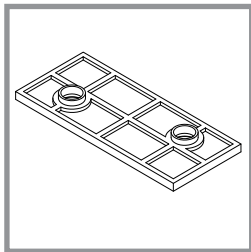


739003
Plastic shim
3mm

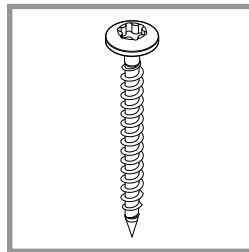


773840
SS torx-screw
5,5x38mm - T30

TOOLS

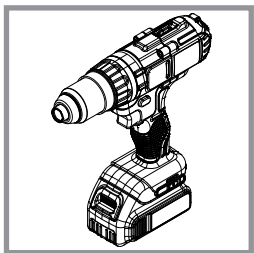


Drill


1

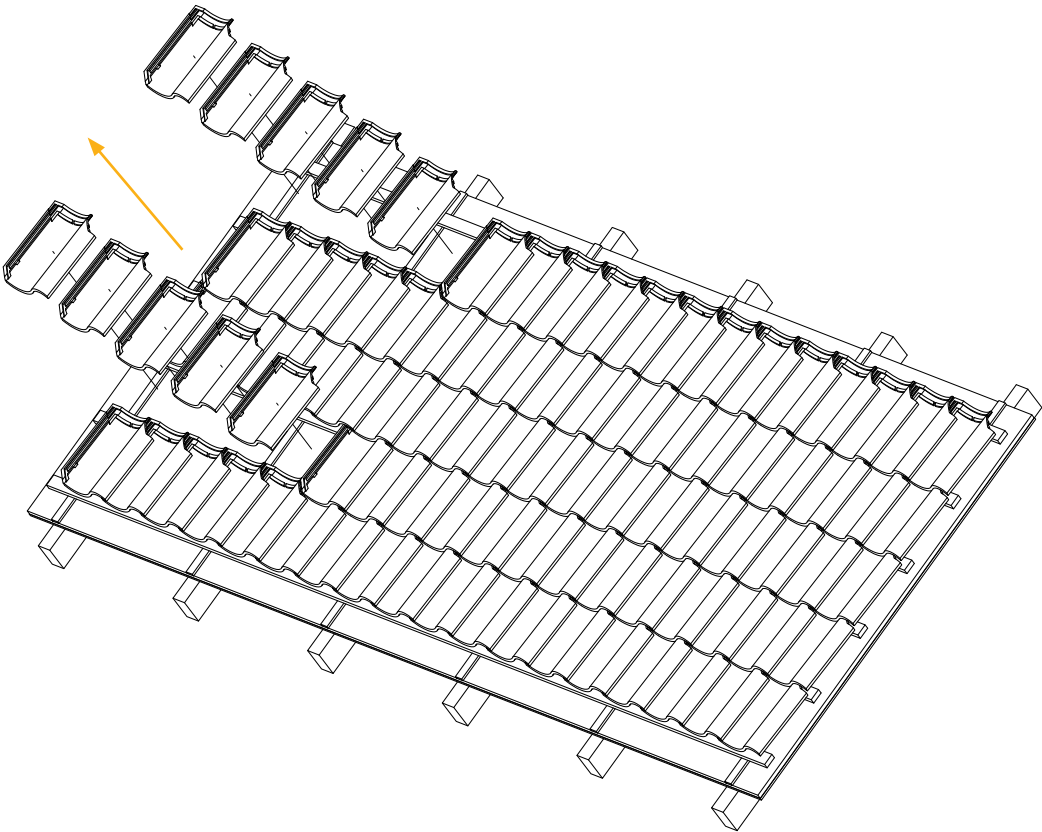


2

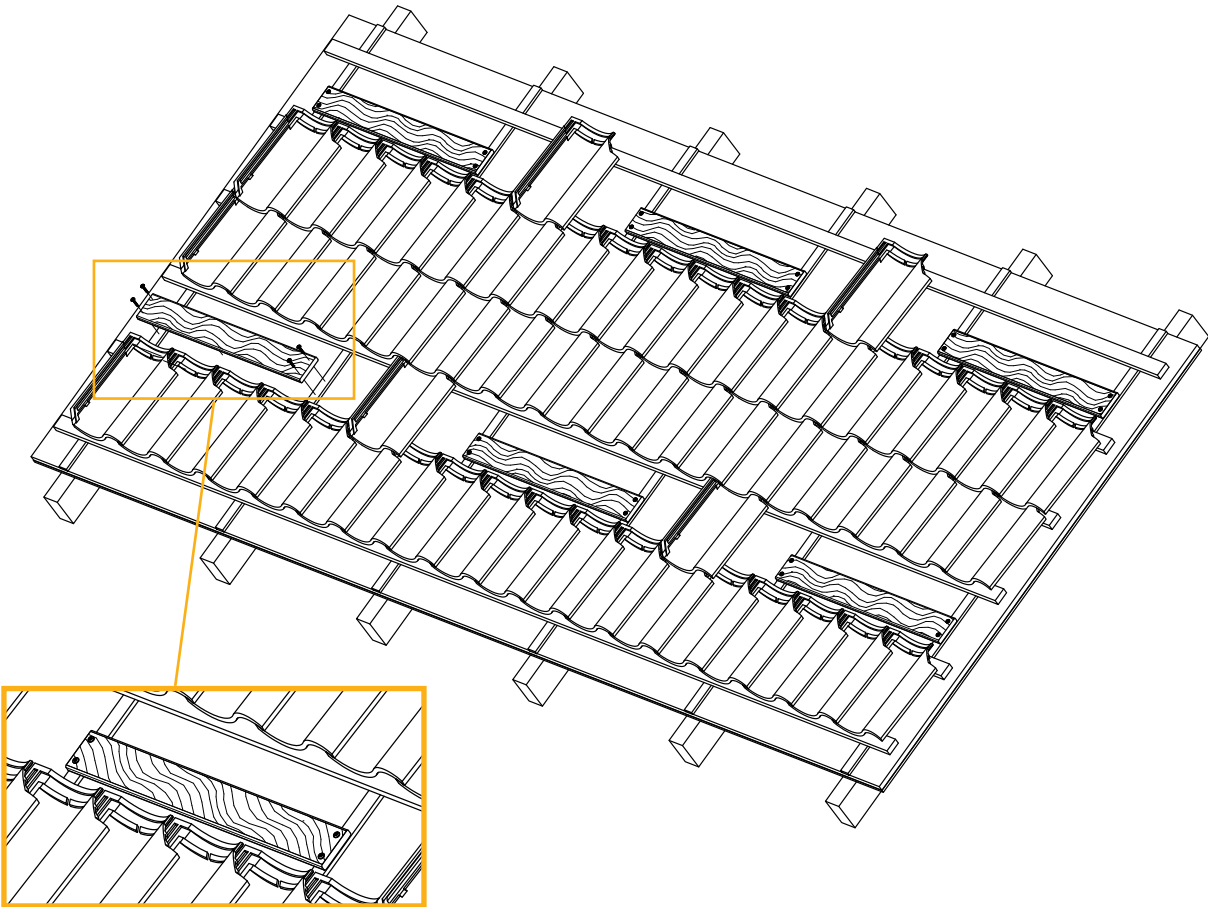


3

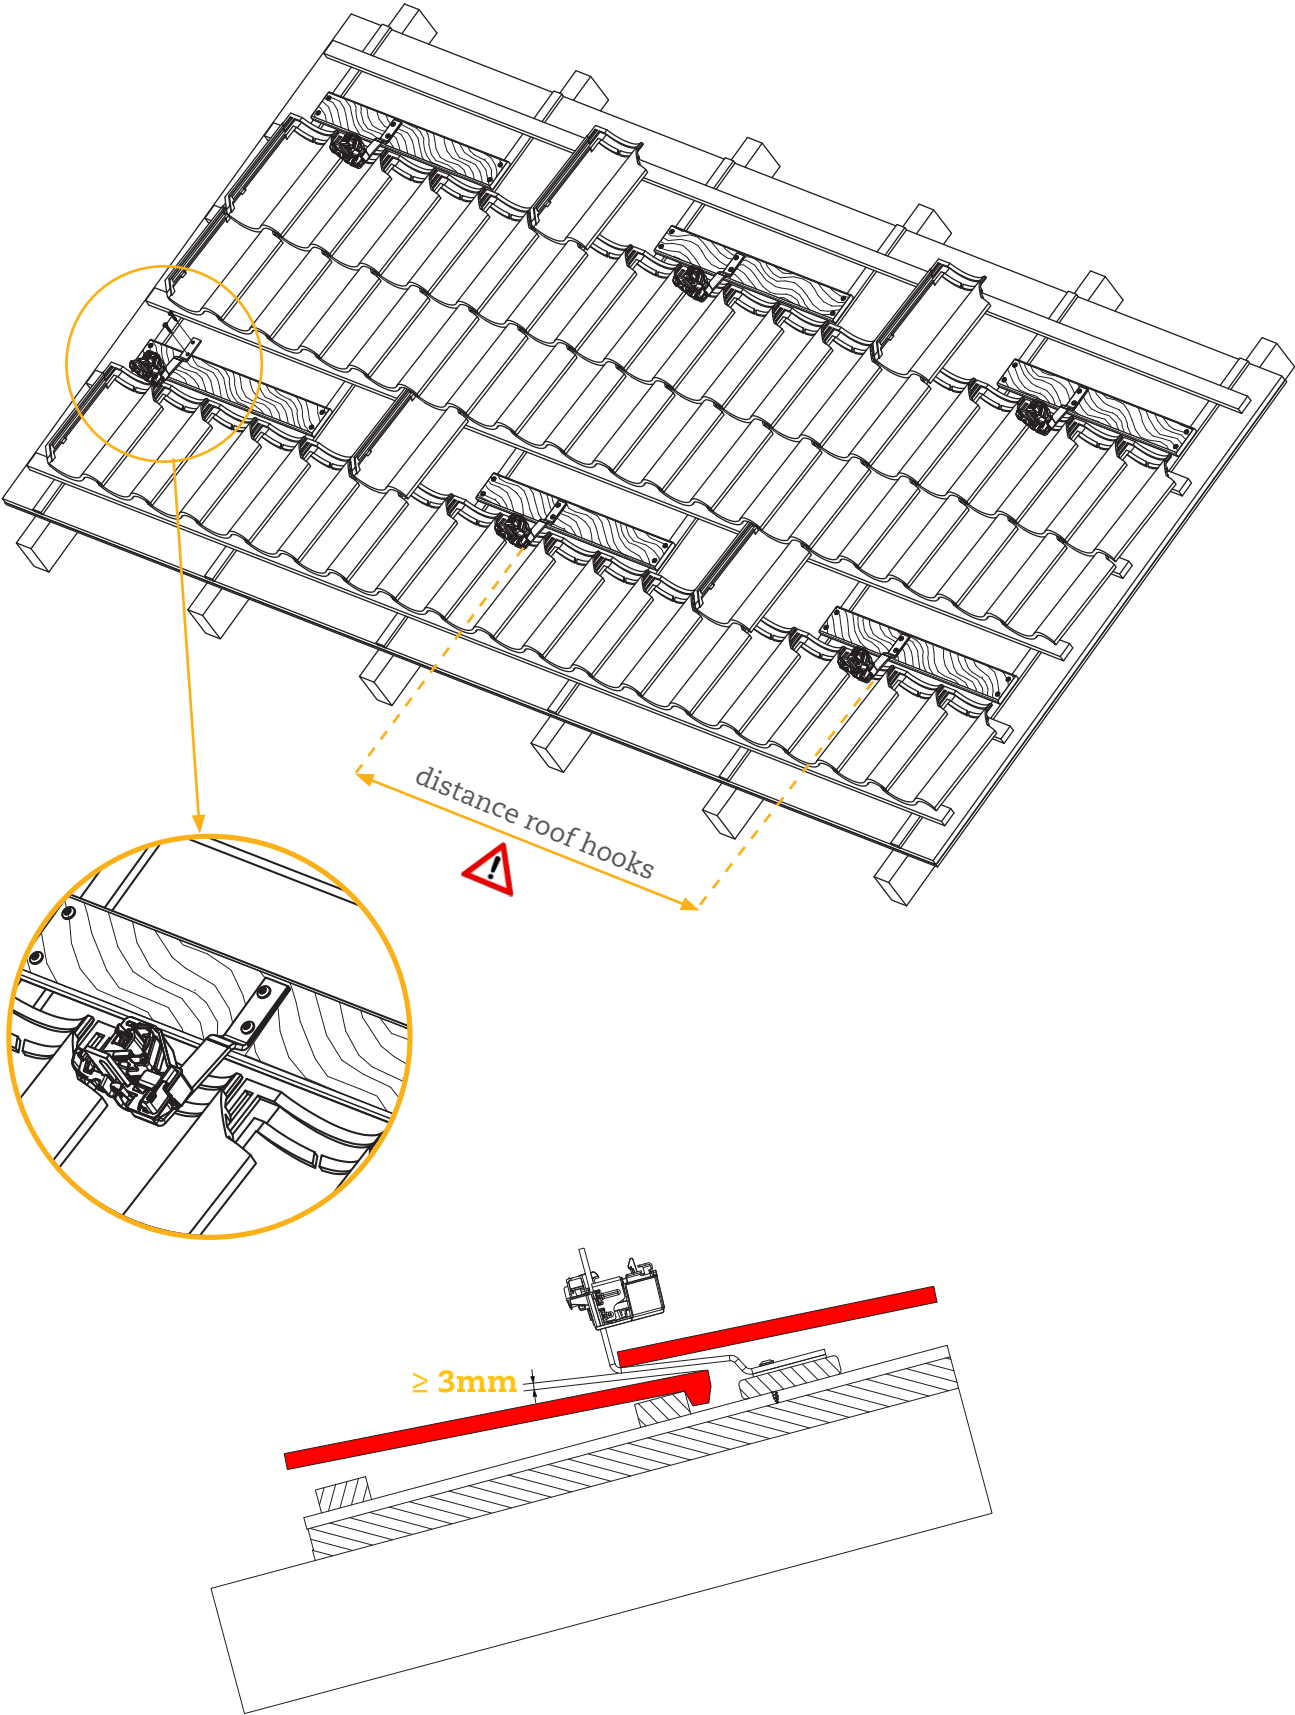

ValkAce+ Slimline

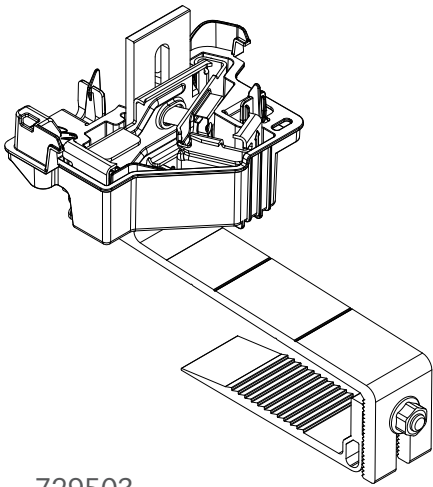




729503
ValkAce+ - Slimline roof hook
- adjustable 35-59mm

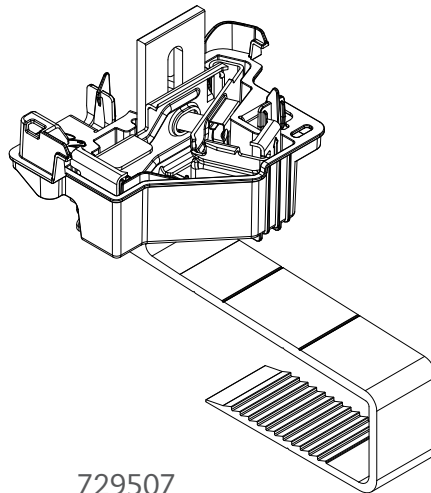


729507
ValkAce+ - Slimline roof hook

1

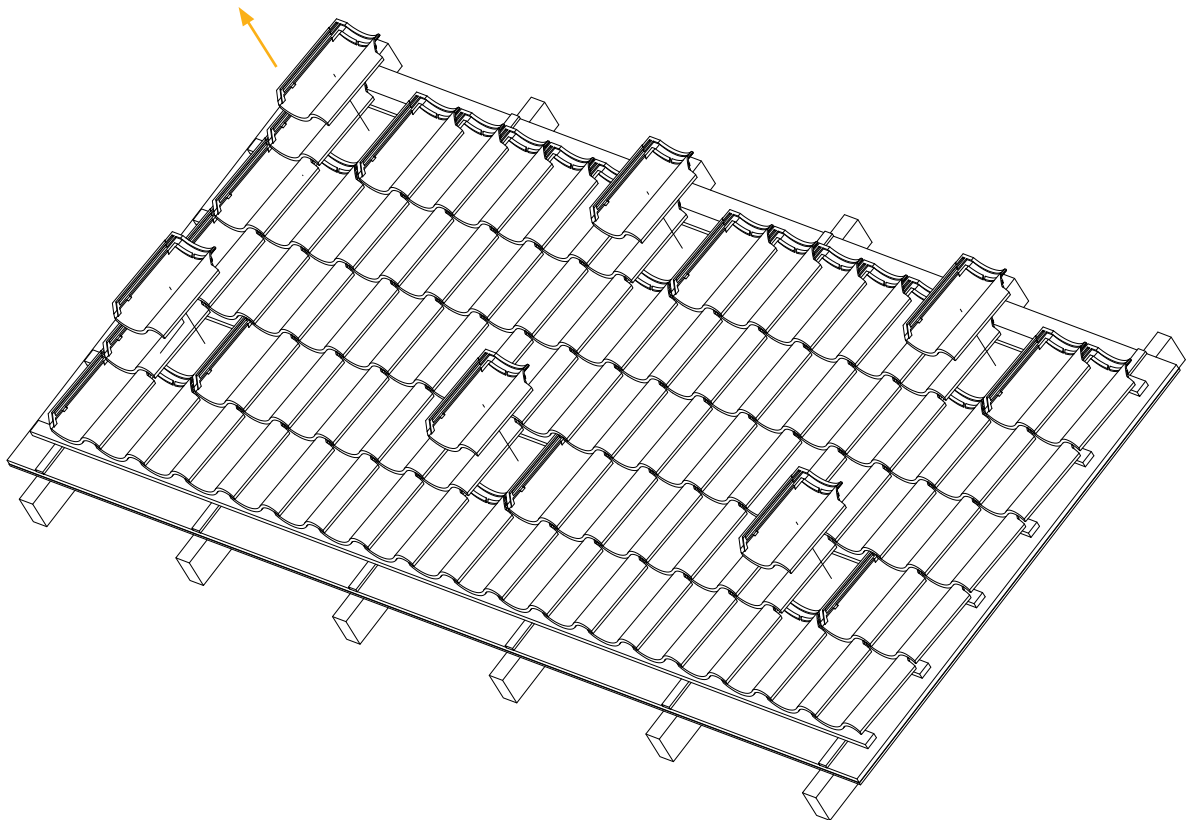


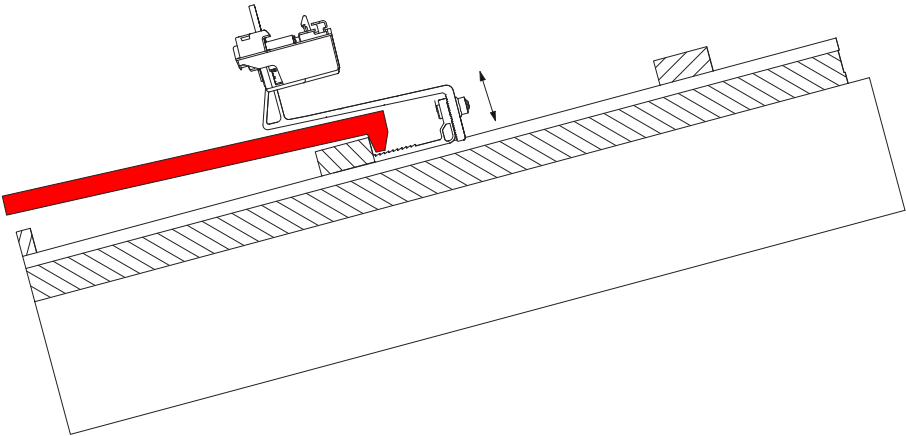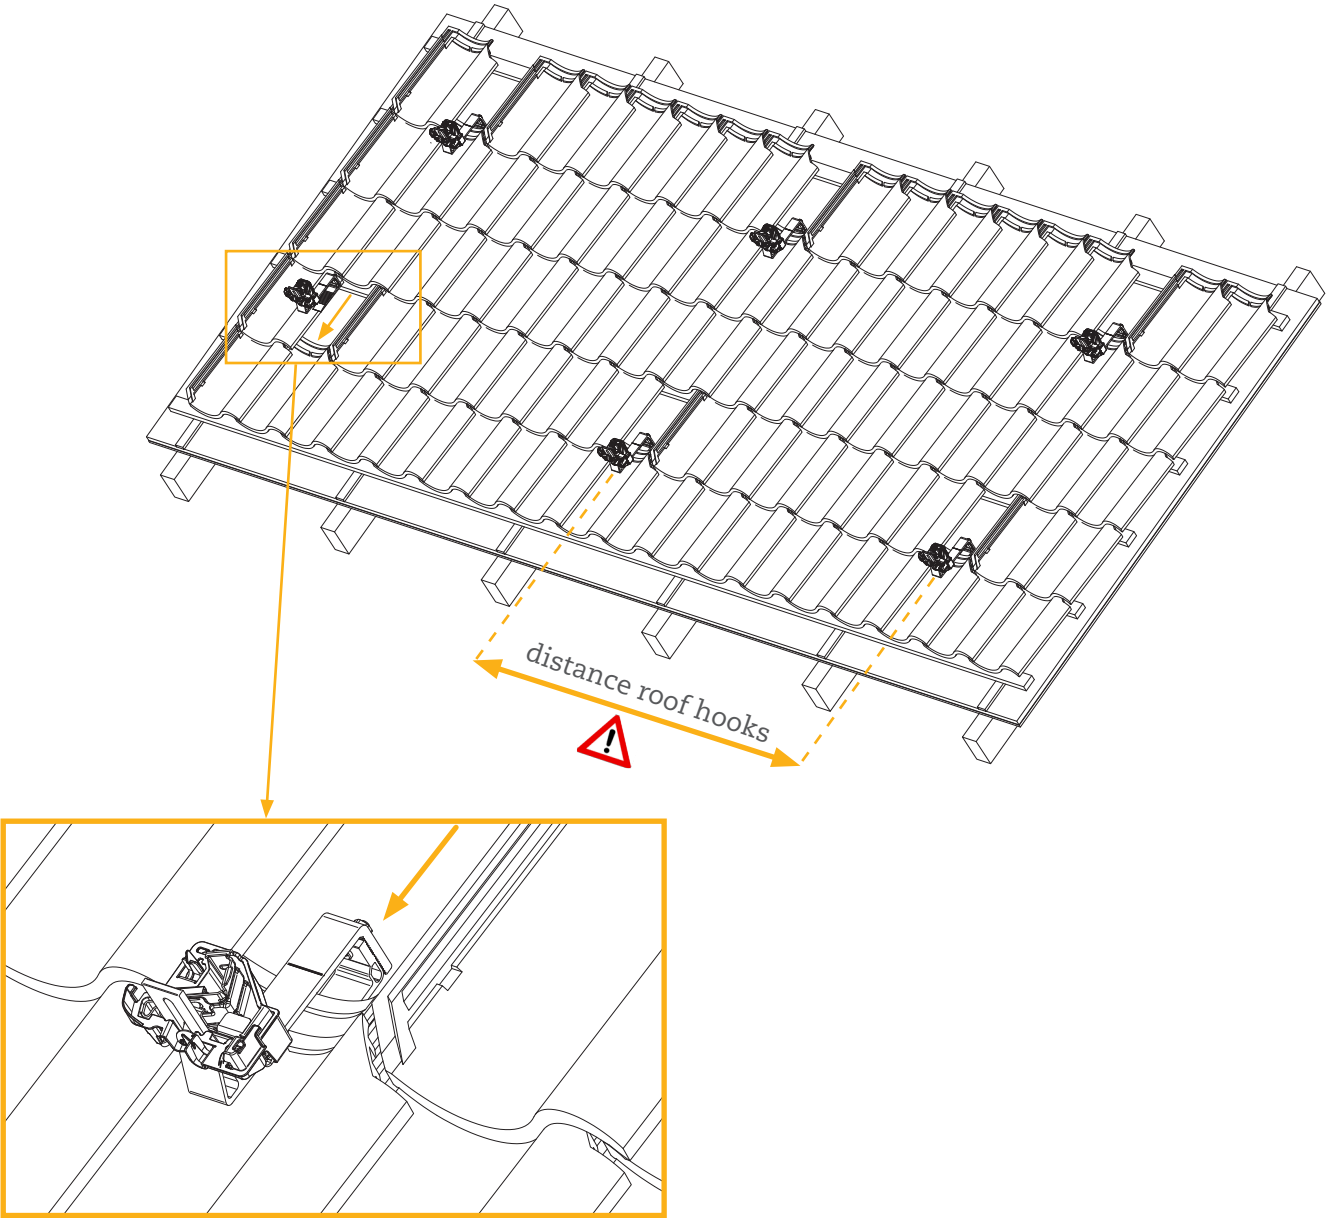

ValkAce+ Strongline

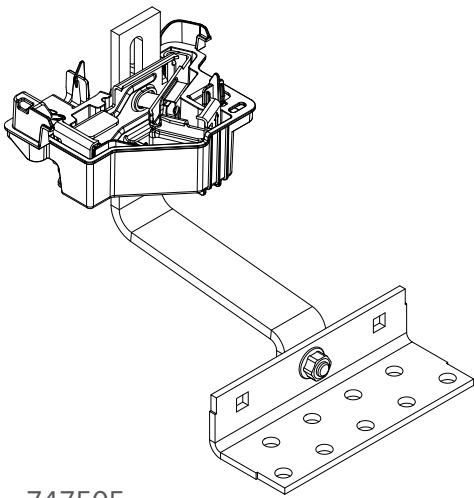


747505
ValkAce+ - Strongline roof hook

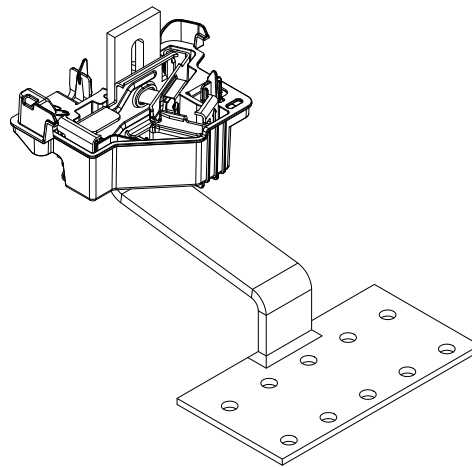


747507
ValkAce+ - Strongline
Heavy Duty roof hook

TOOLS

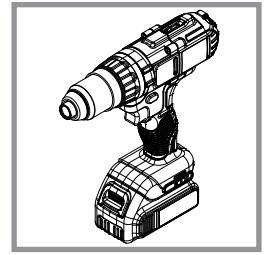


Drill



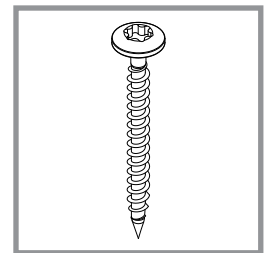


773840
SS torx-screw
5,5x58mm - T30


1

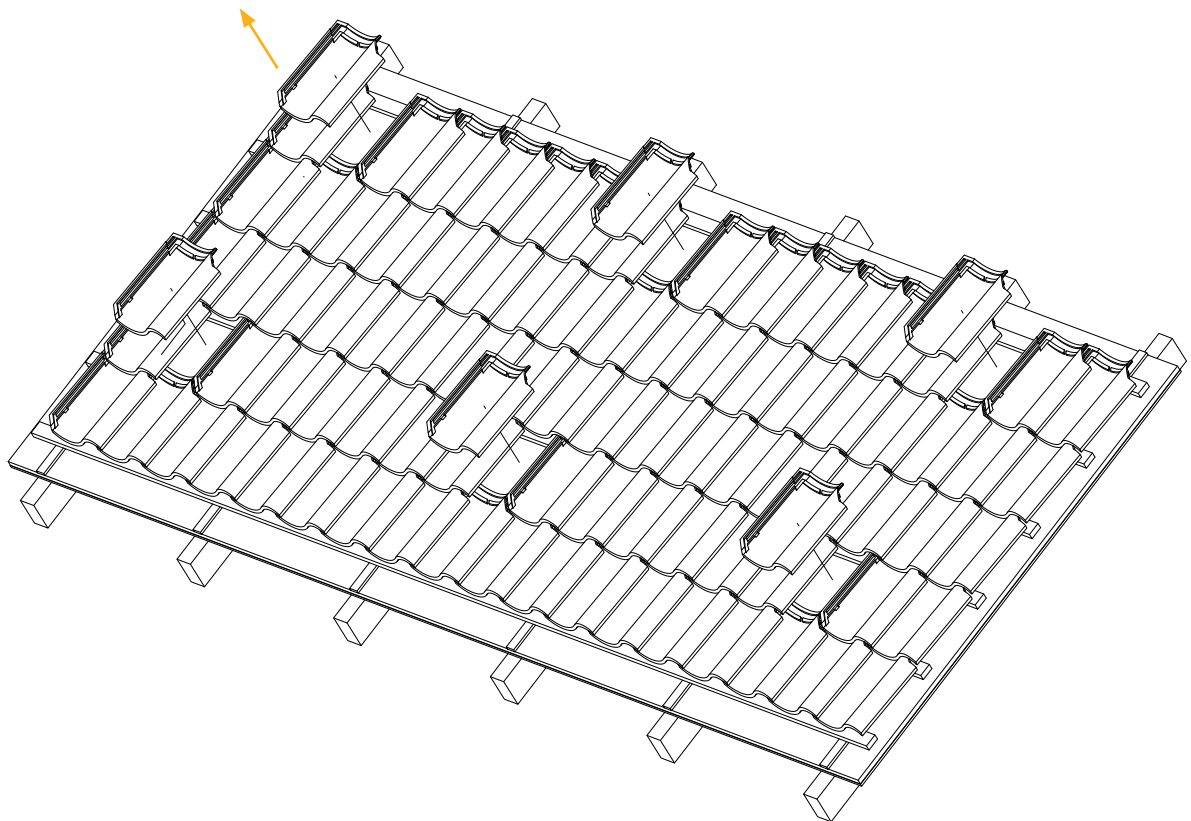


2

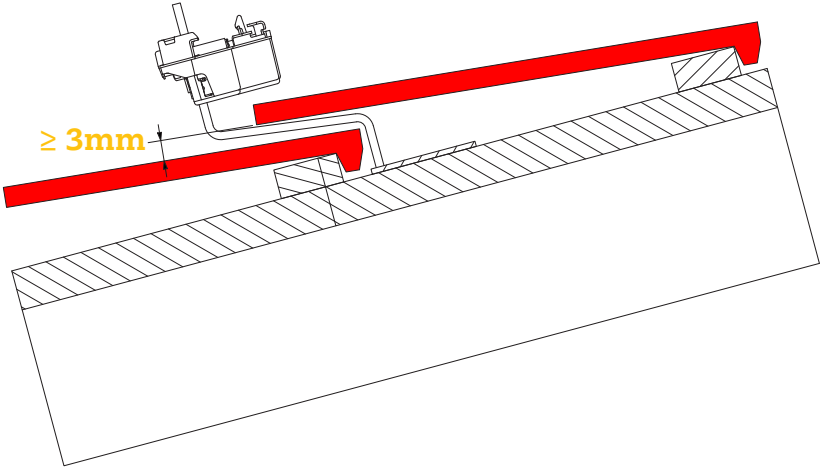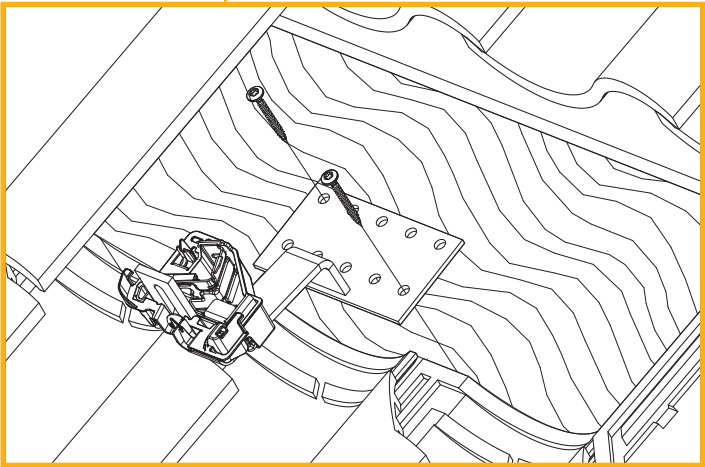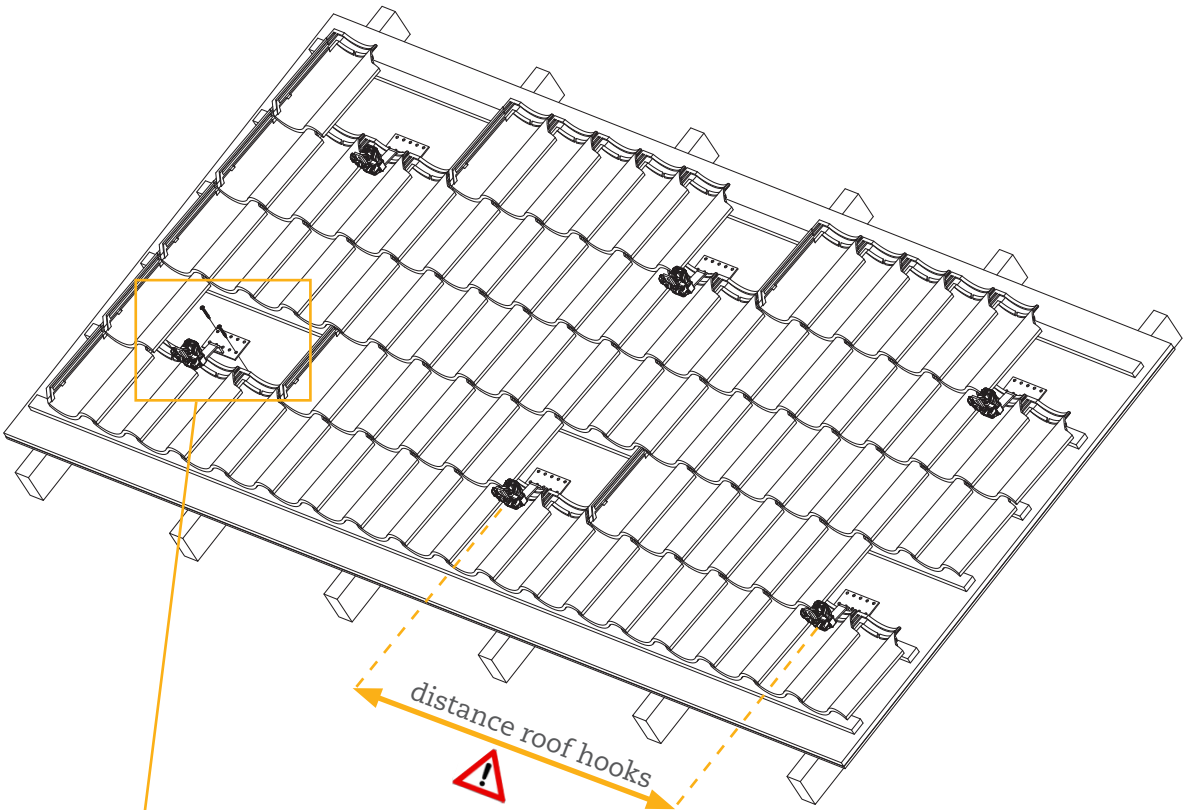

Coupling ValkAce+ profiles

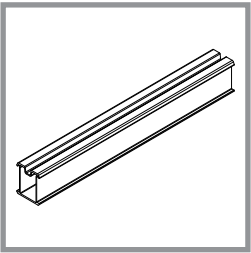


7019....*
*see table

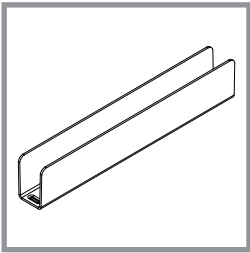


749502
ValkAce
Profile coupling


TOOLS

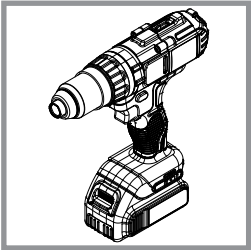




Drill

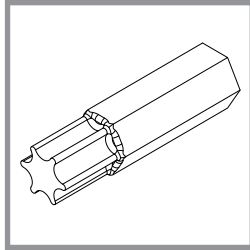


Torx bit T-30

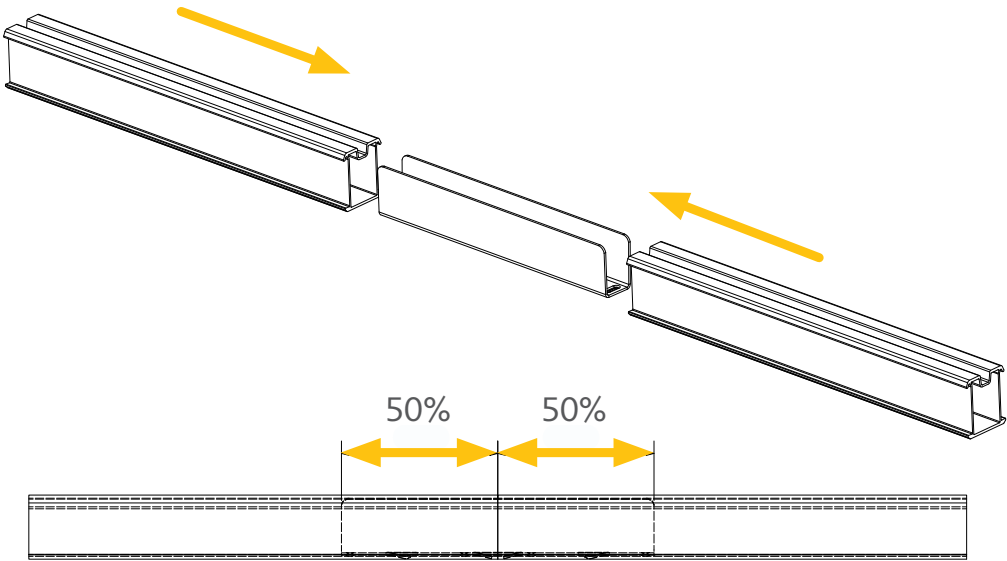


Profiel length	Art no.
1220mm	701901220
2370mm	701902370
3520mm	701903520
4670mm	701904670
5820mm	701905820

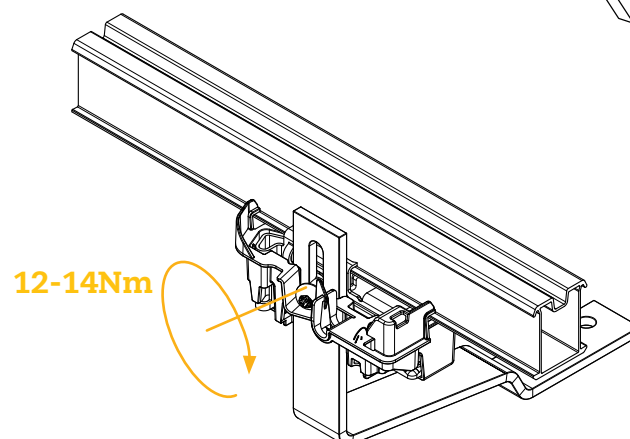
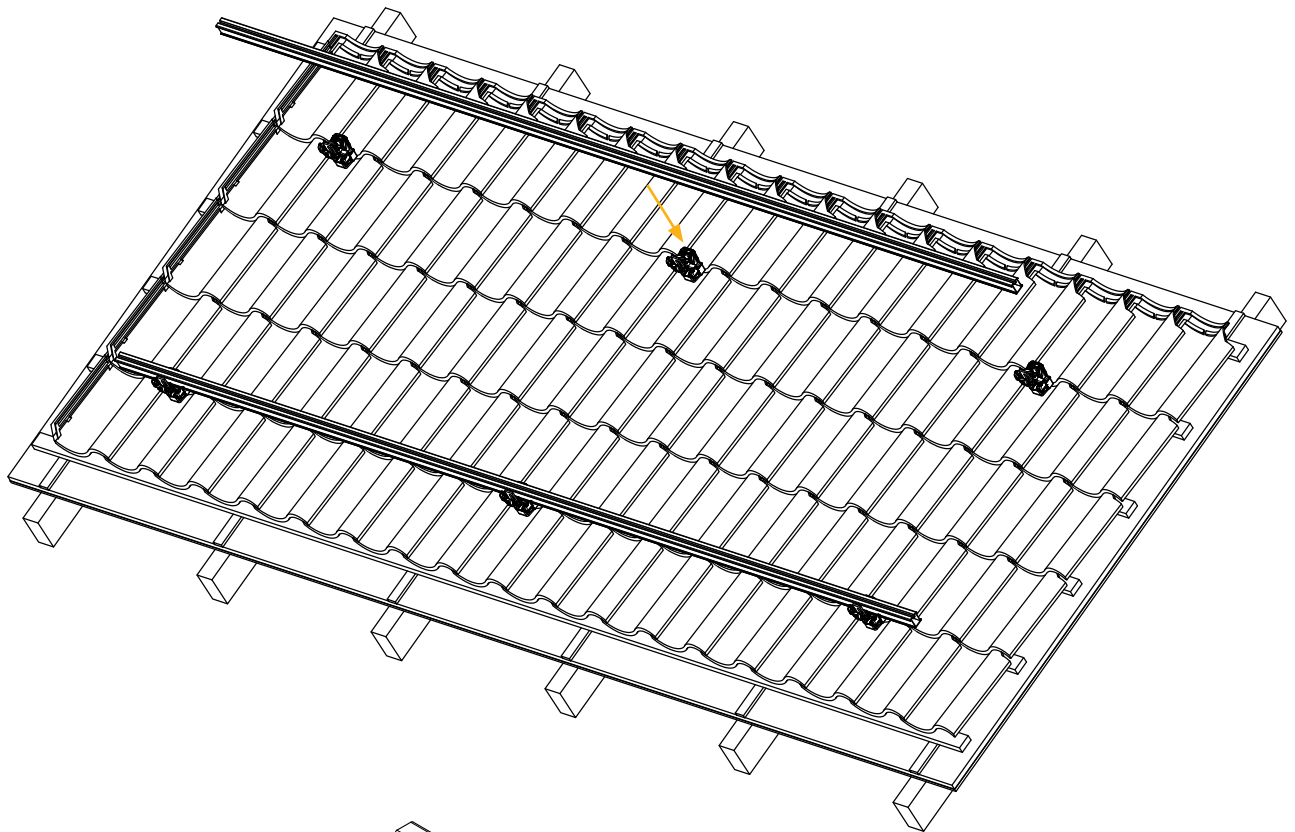
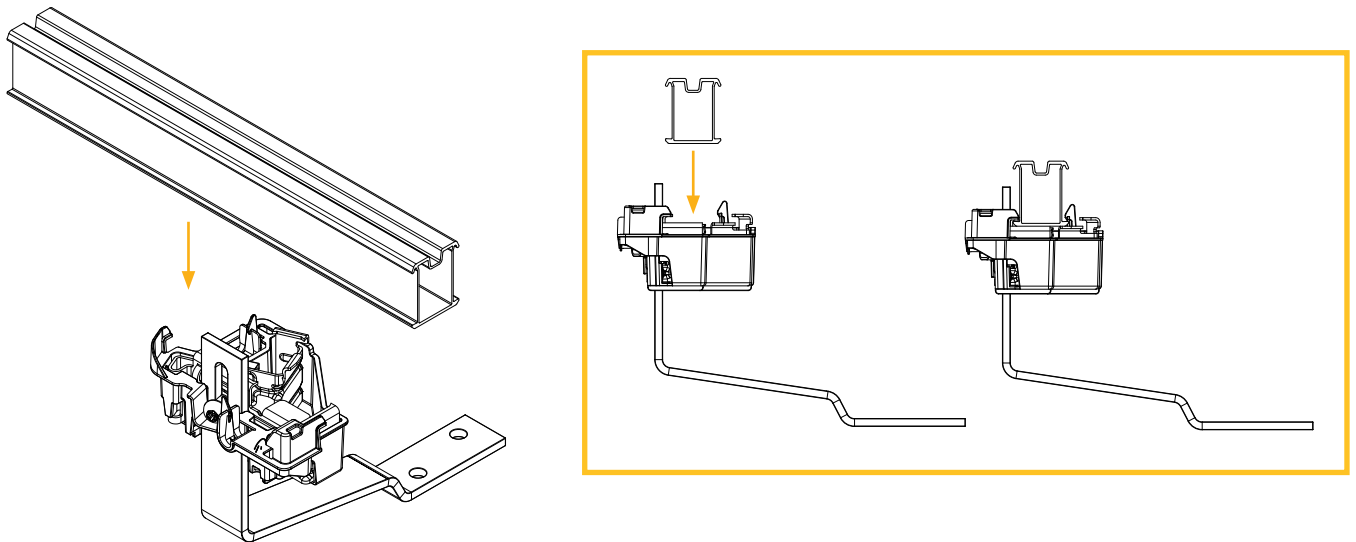


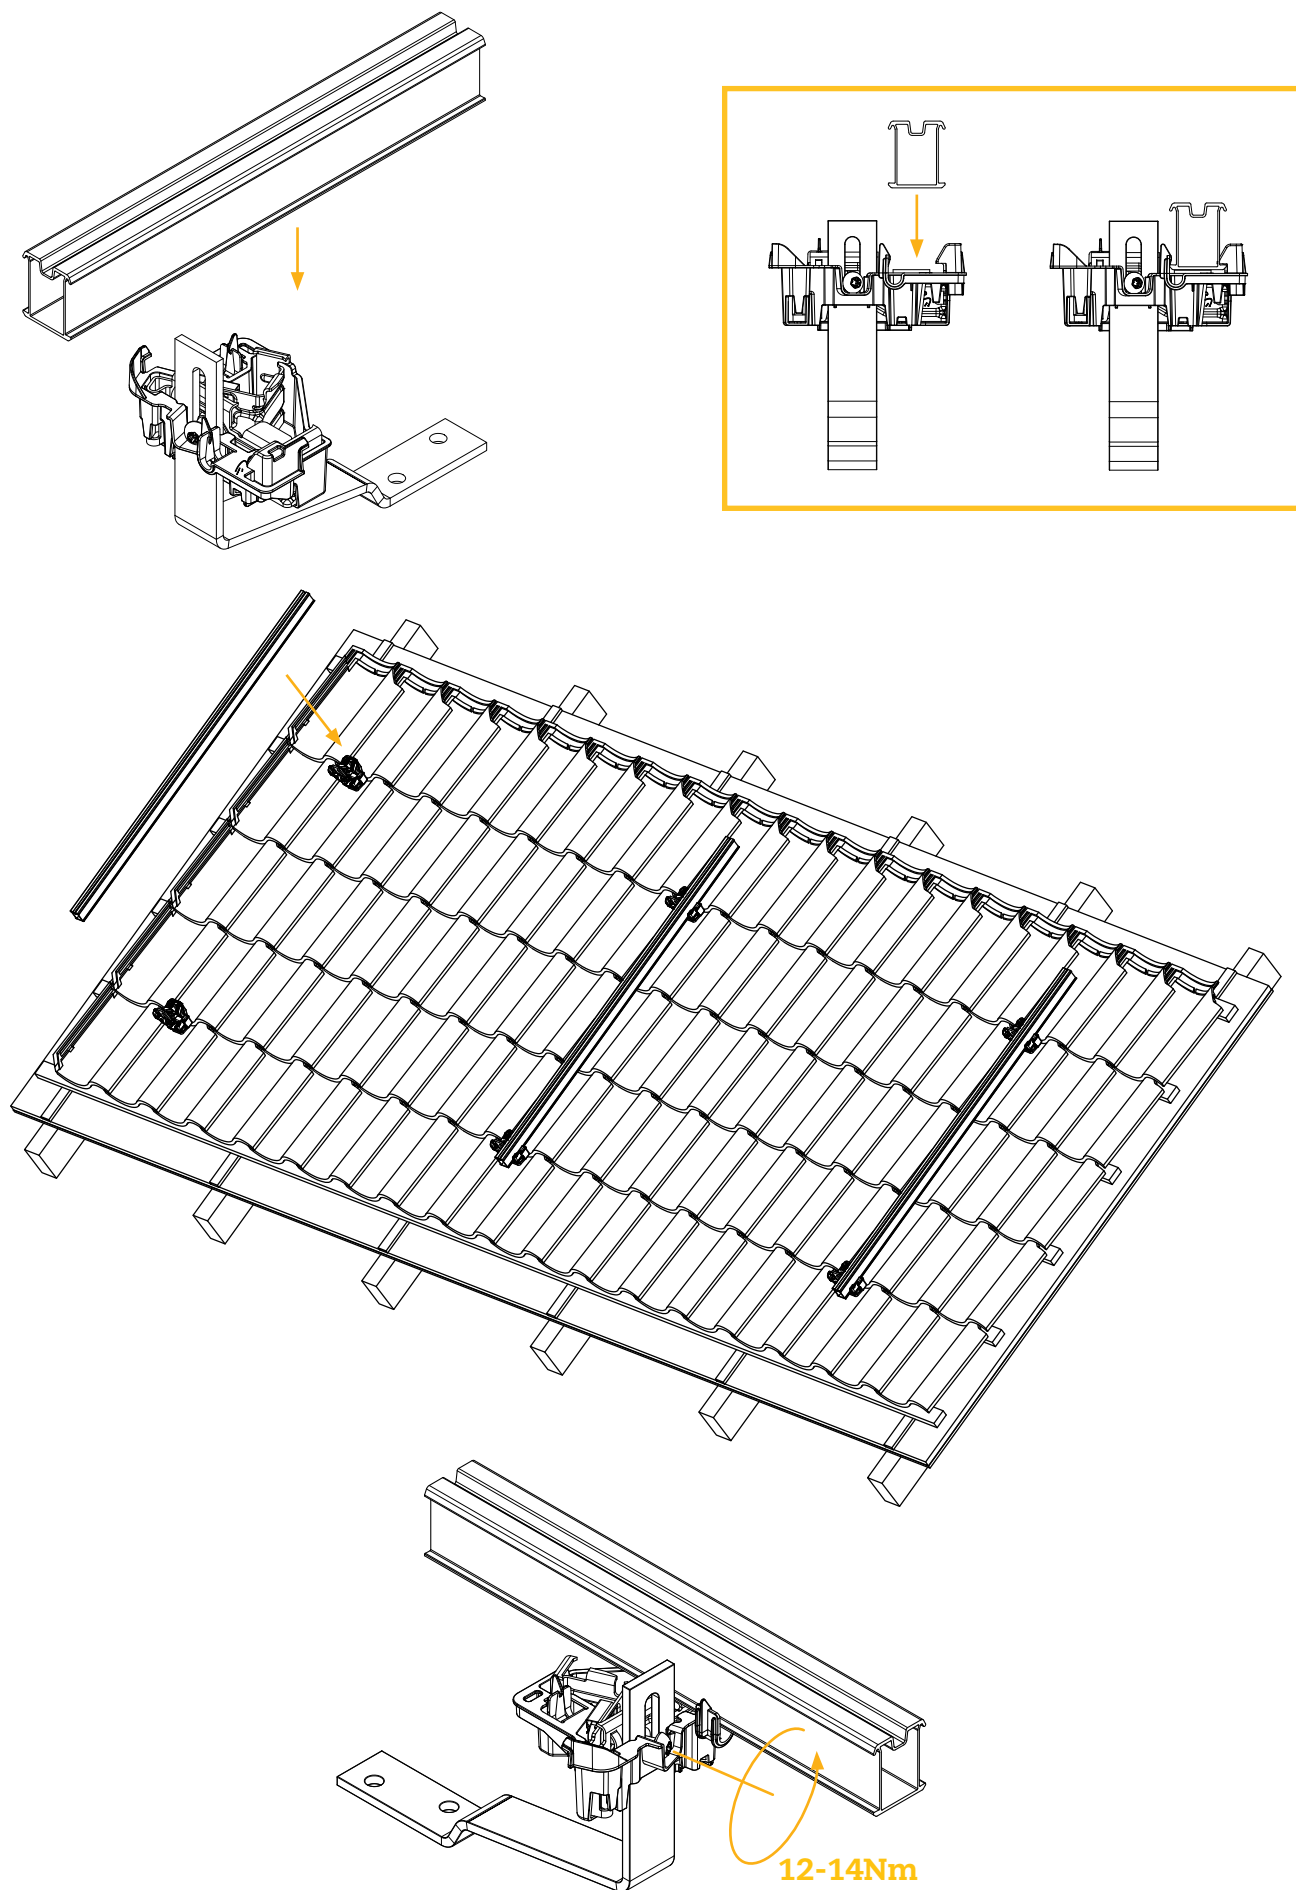


Required parts

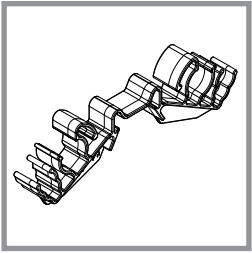





739061
ValkAce
Cable and connector clip

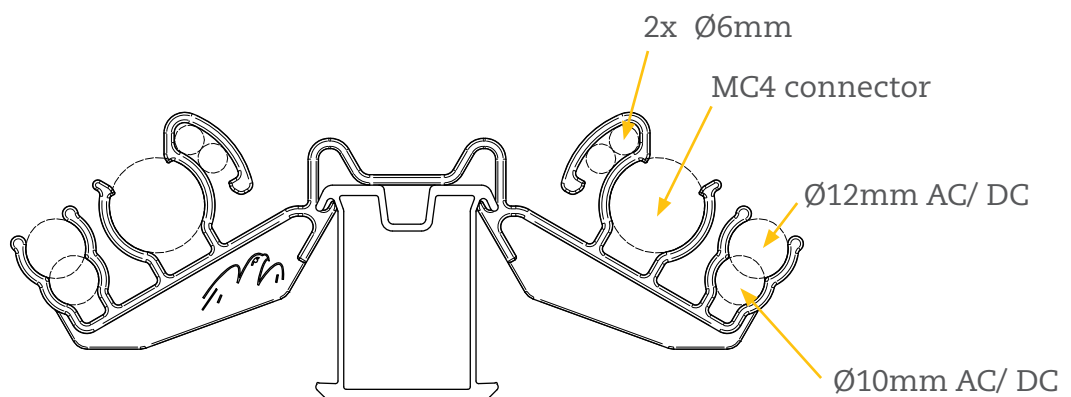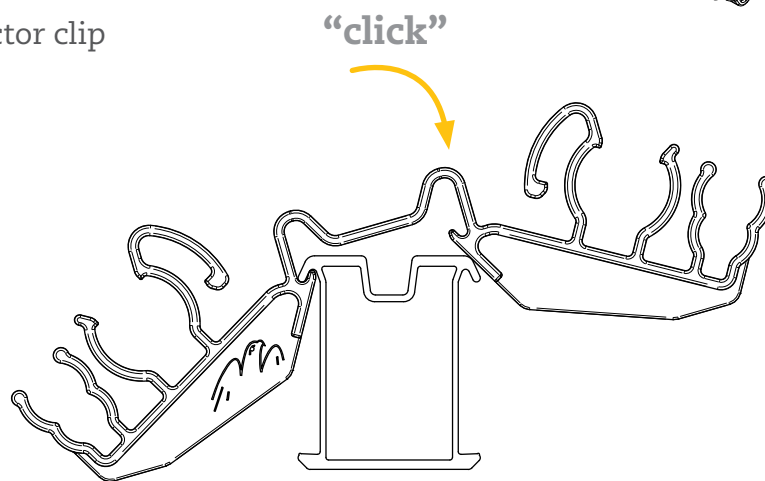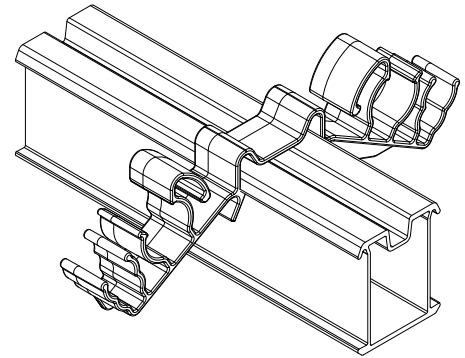


Required parts

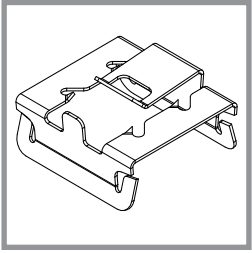




739062
ValkAce
Micro/optimizer-clip Light
(upto 8kg)

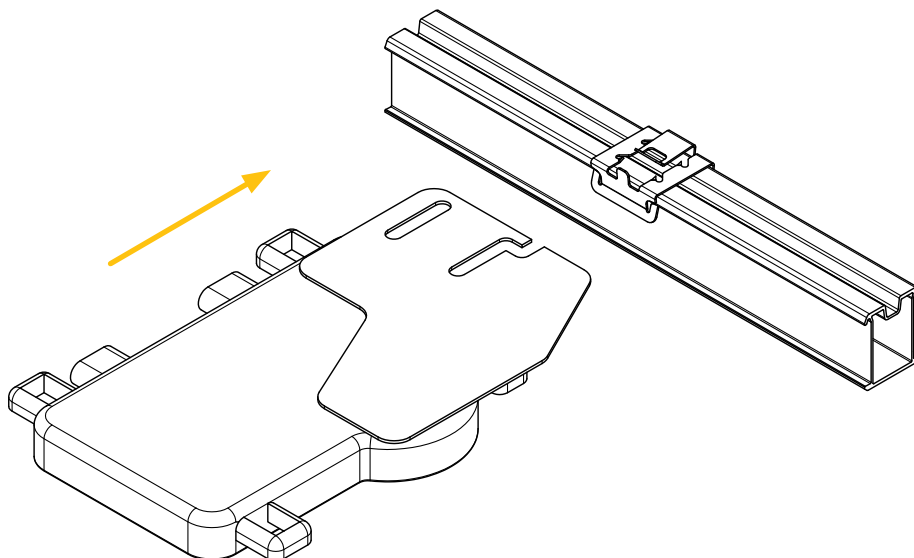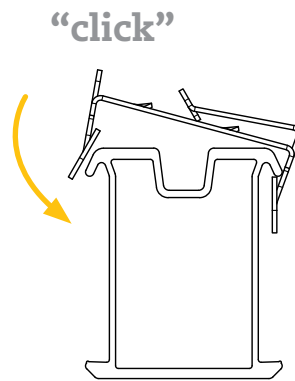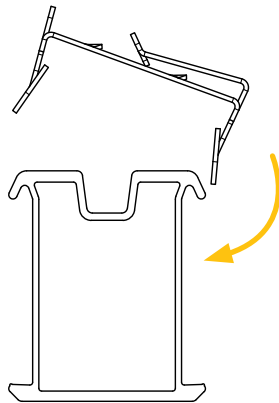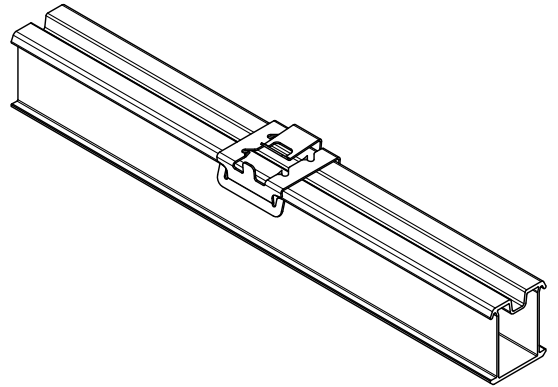


Required materials

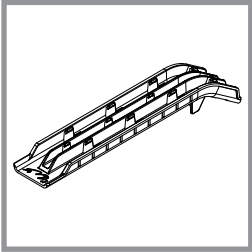


739063
Plastic cable entry roof tiles

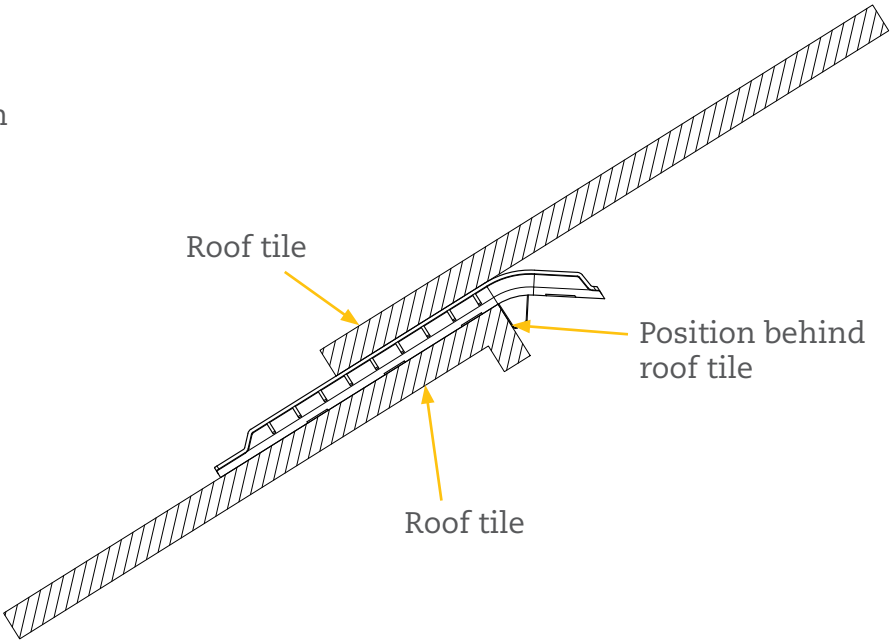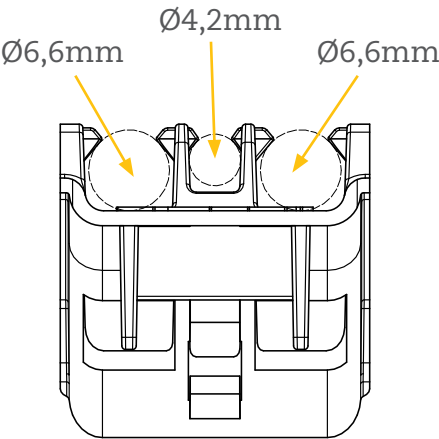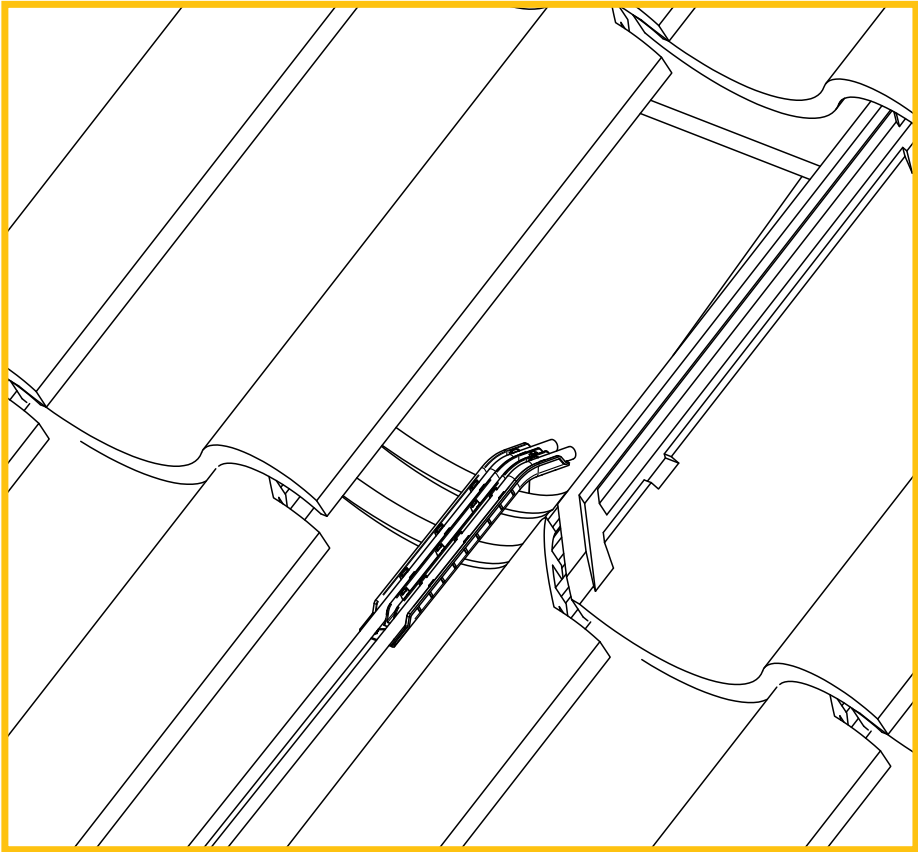


Required materials

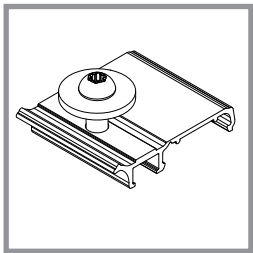


721440
ValkAce
Micro/Optimizer
clamp Heavy

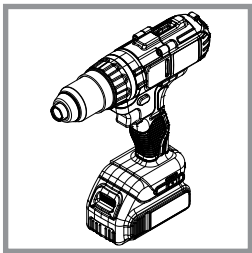


Drill

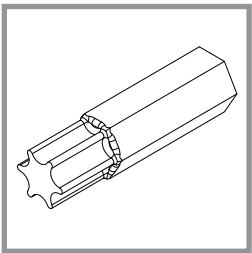


Torx bit T -30

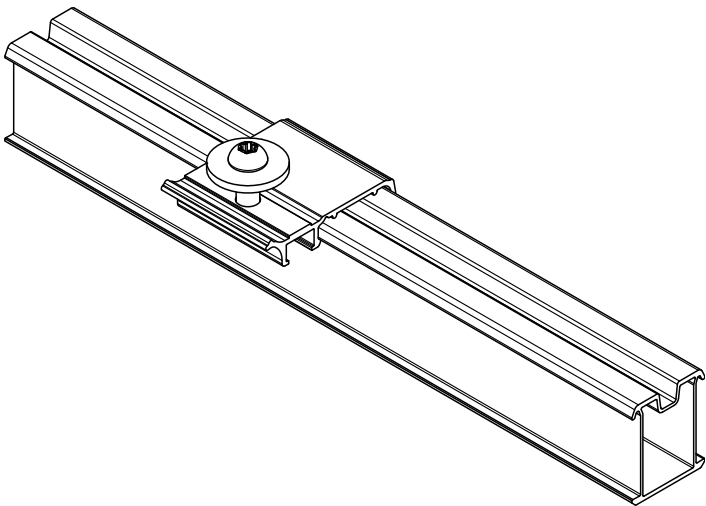



do not press here

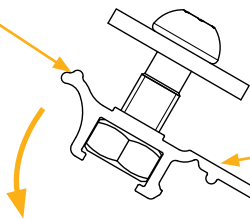


Press down here

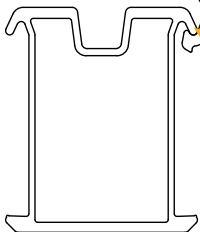


Hook

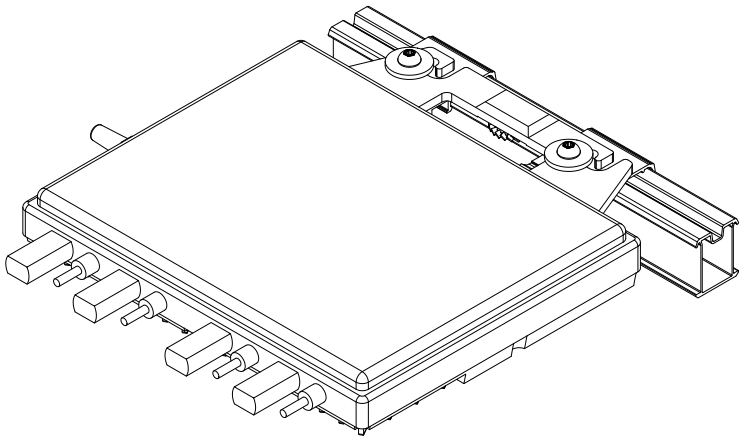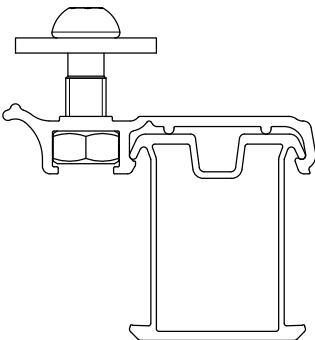

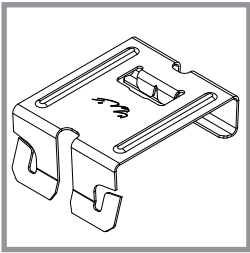


739064
ValkAce
Earthing clamp



1

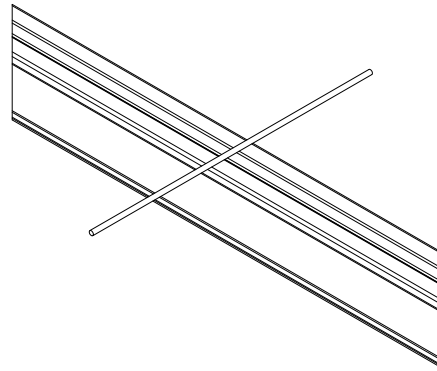

2

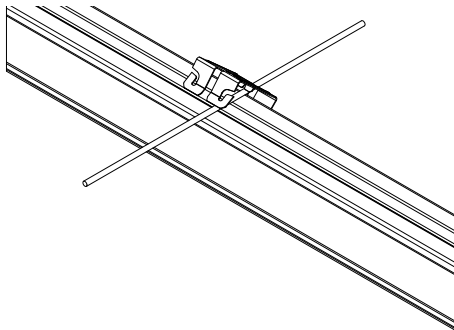


3

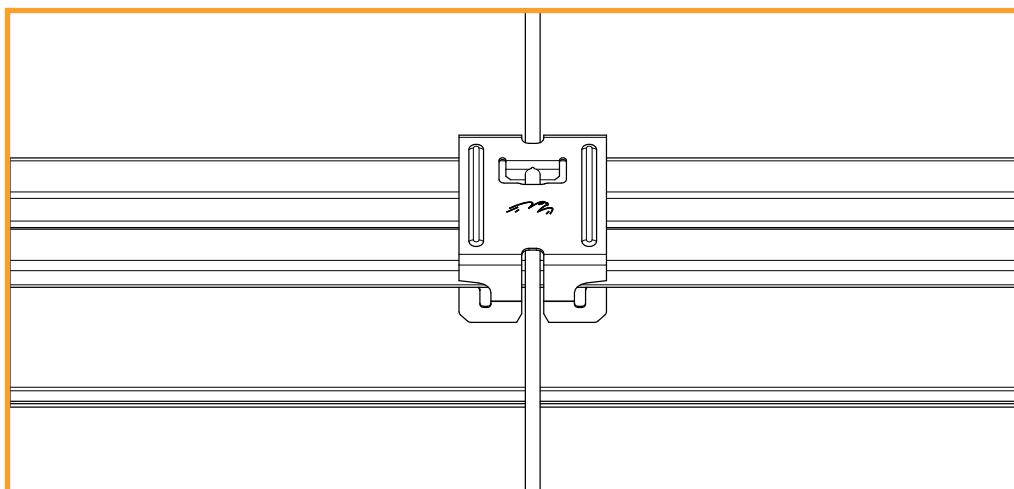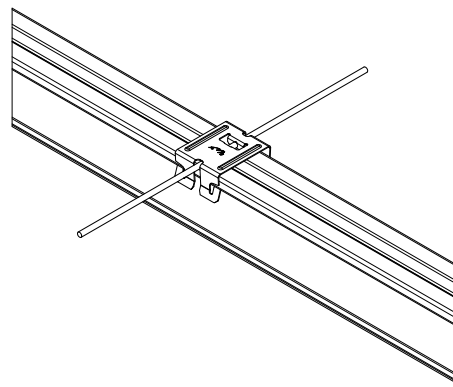


Make sure that the earth clamp is tightened properly so that the sleeve of the earthing wire is definitely cut. Also make sure the earthing wire runs straight through the two cutting blades.


parts

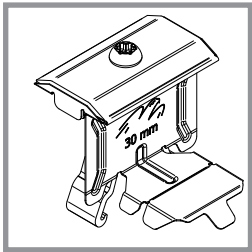


770230 (30mm)
ValkGrip

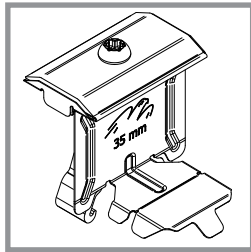

770235 (35mm)
ValkGrip

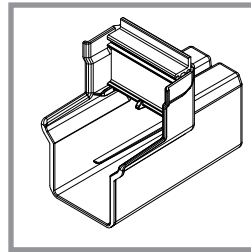


771030
ValkAce+ - End cap

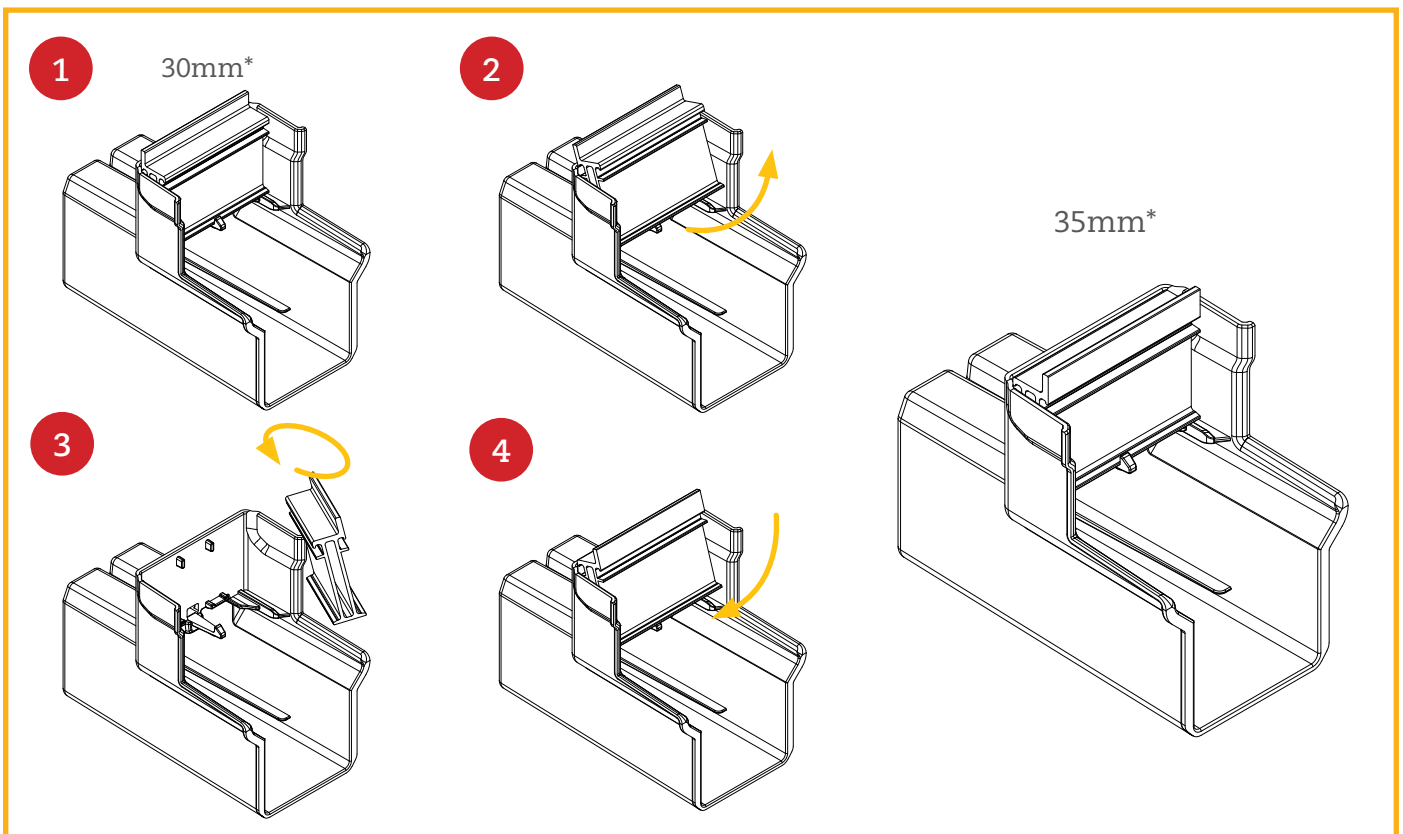


Detaching ValkGripClip


Rotate the ValkGripClip out of the midclamp. this is done by pulling the side of the clip like seen below. Detaching the clip might need some force, this will not break the clip.

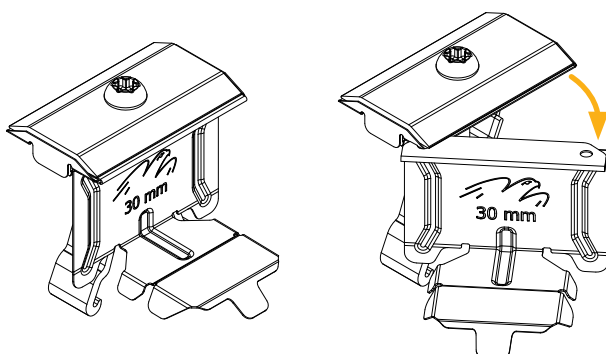


Attaching the ValkGripClip

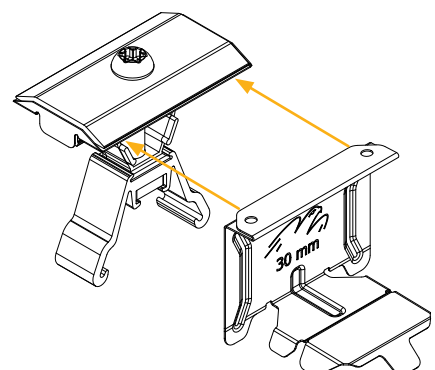


1


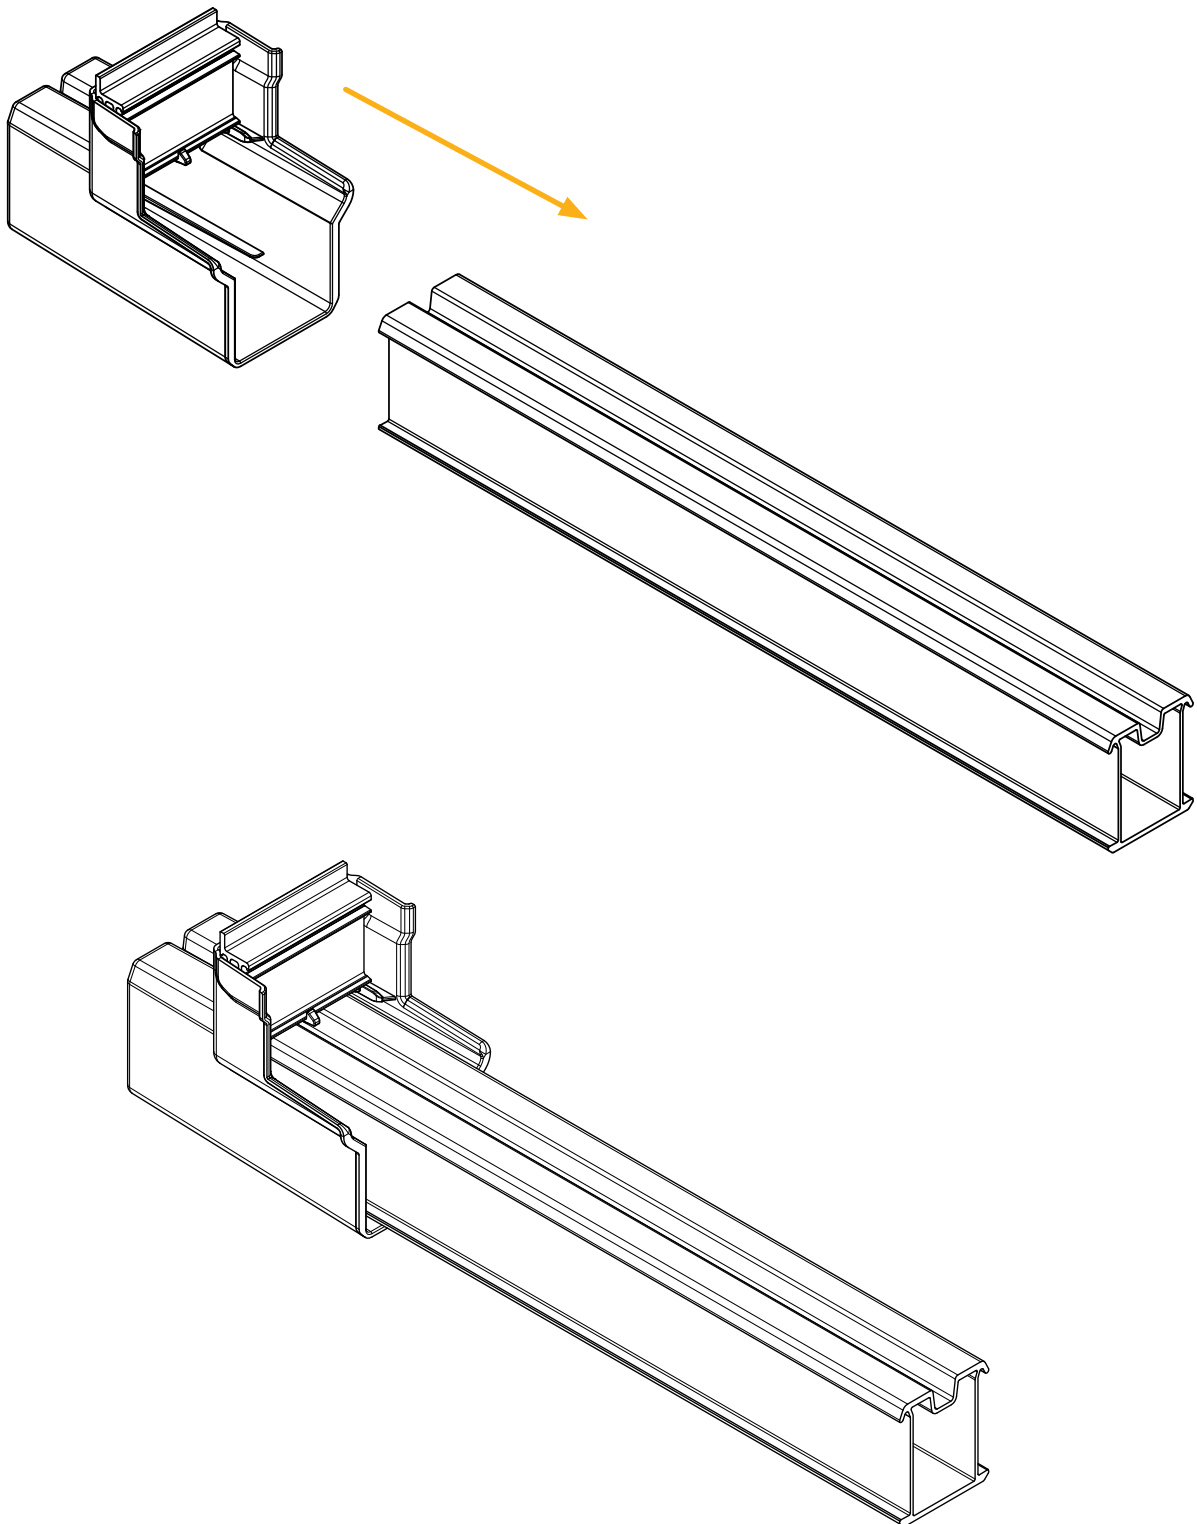


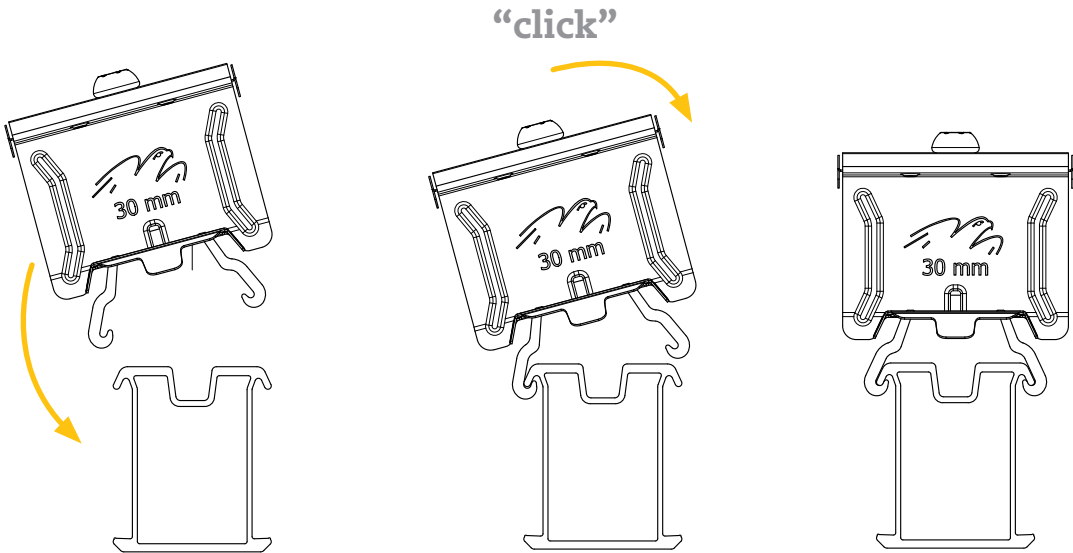




2

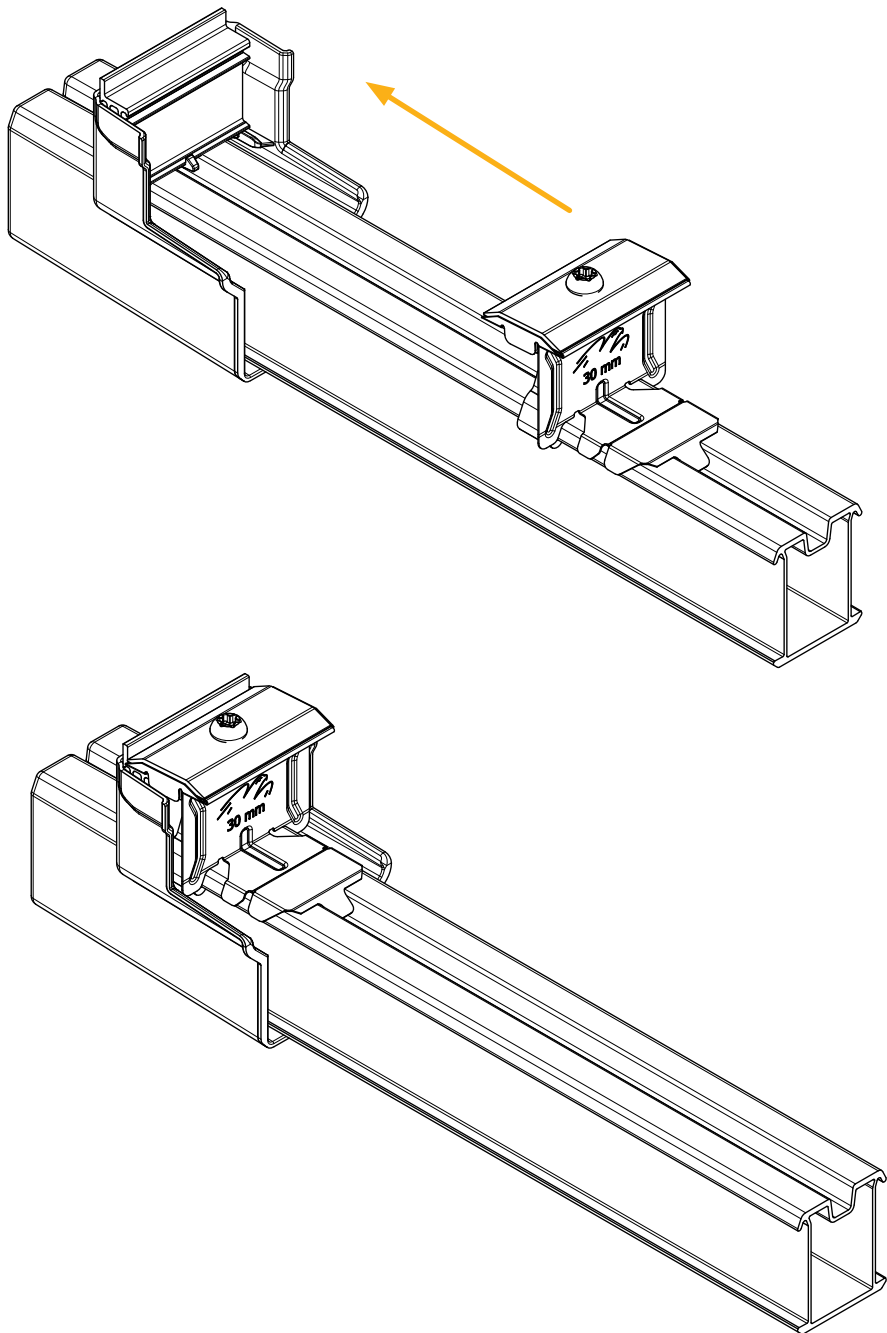



1

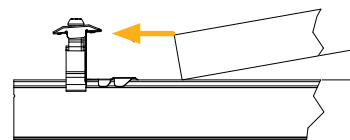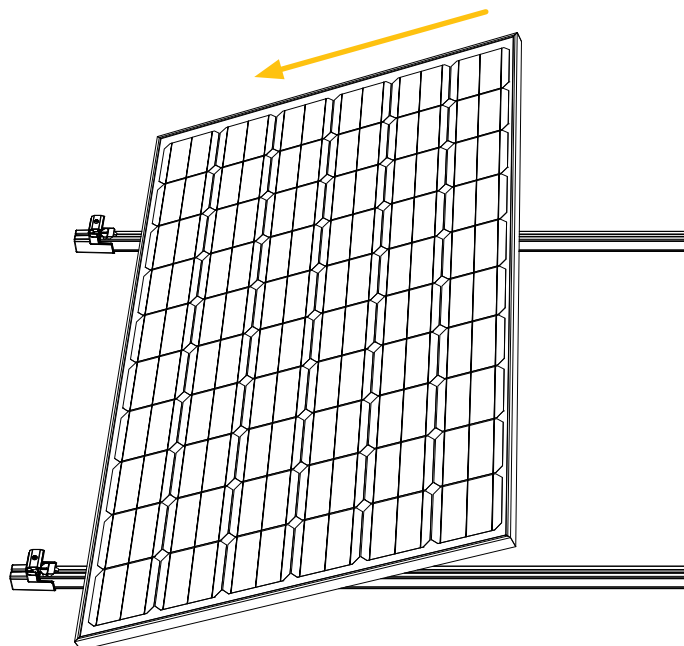


2

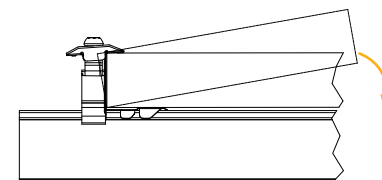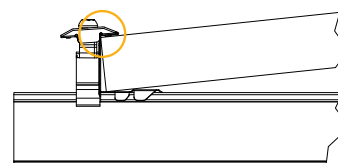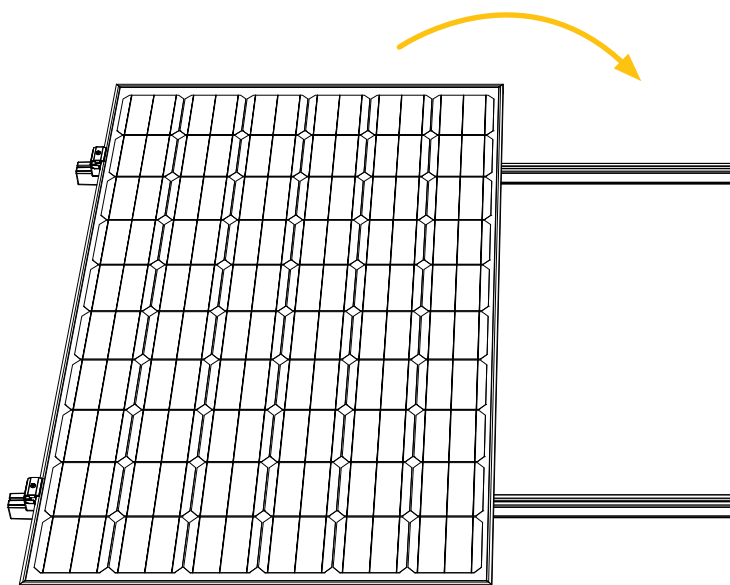


3

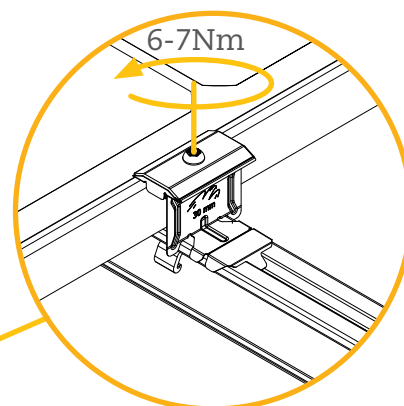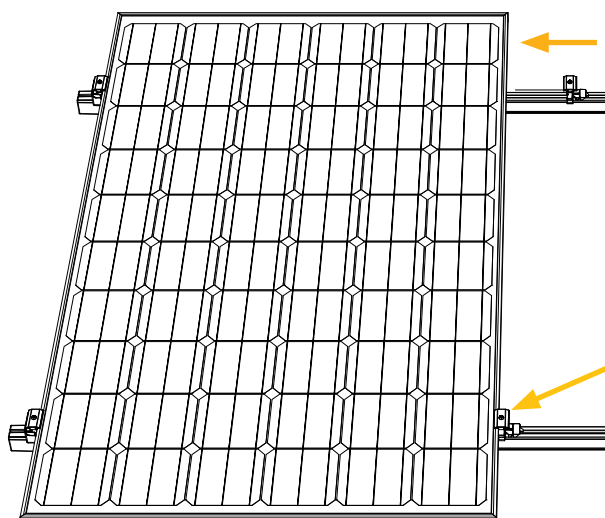


4

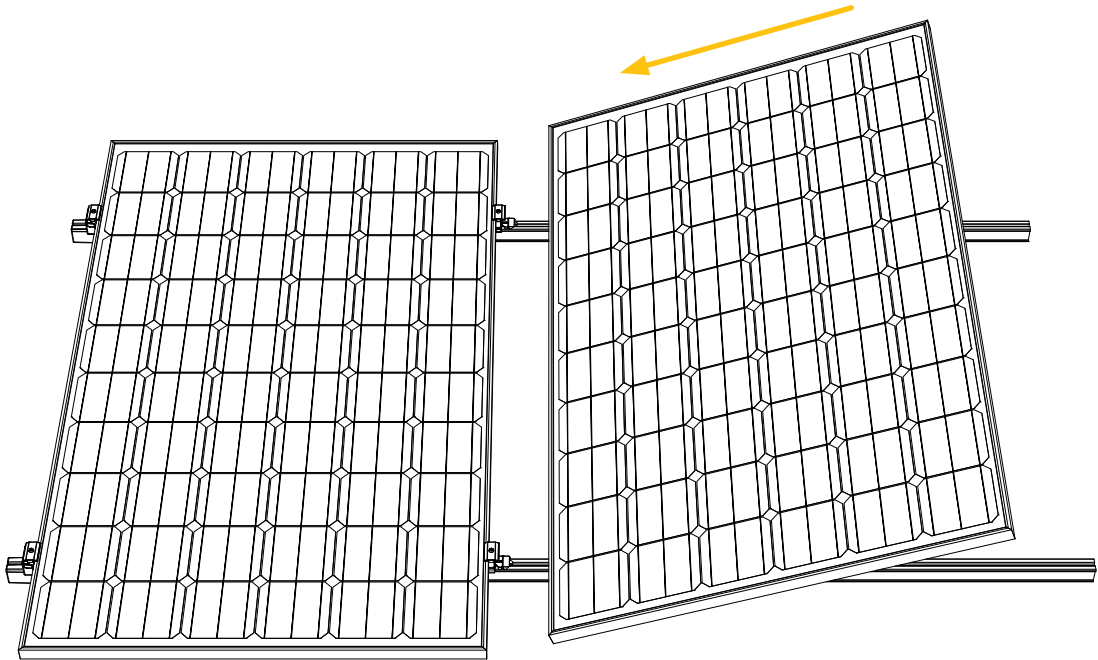


5

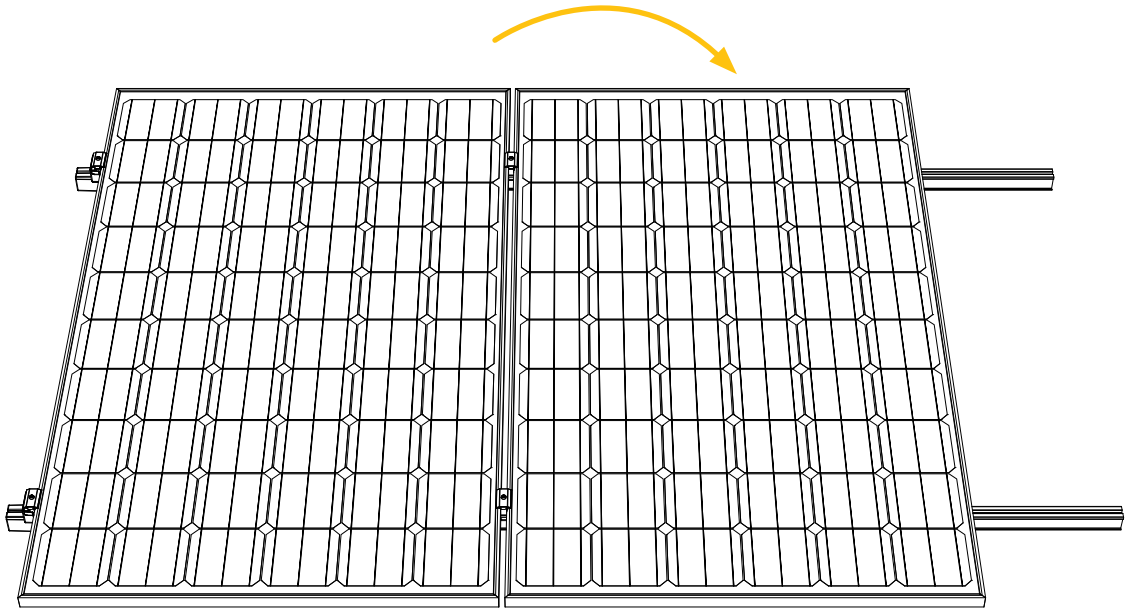


6

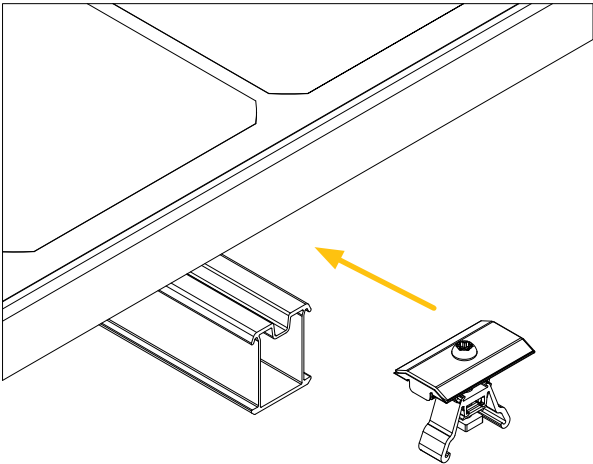




7

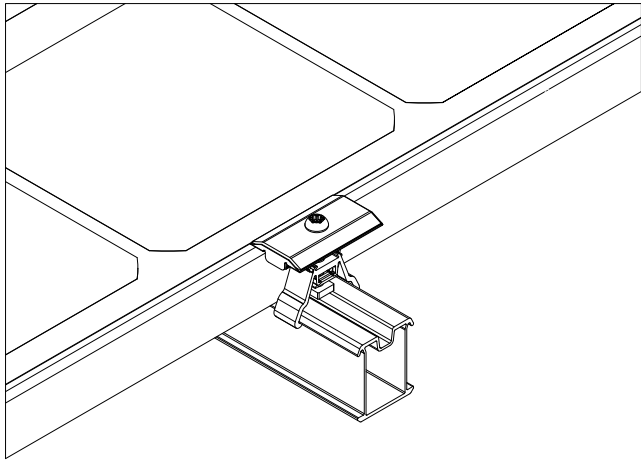


8

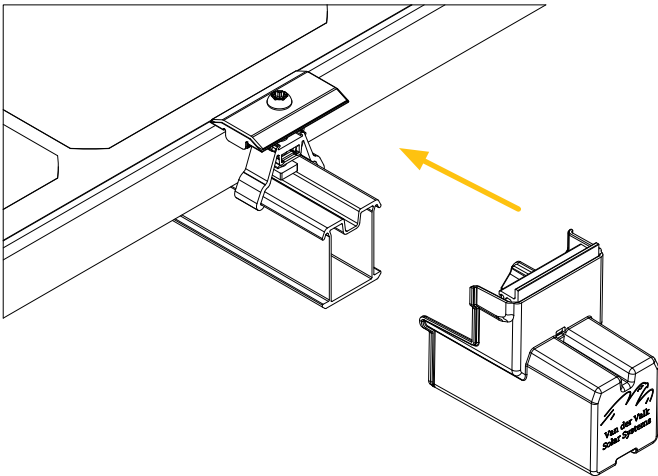


9

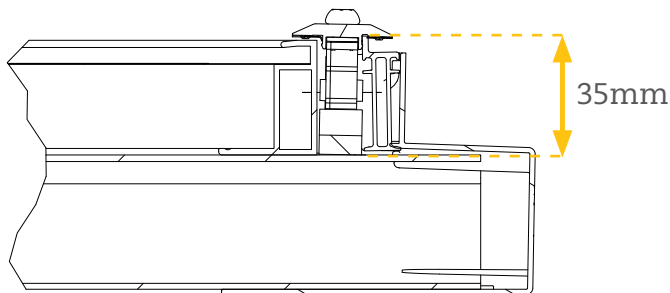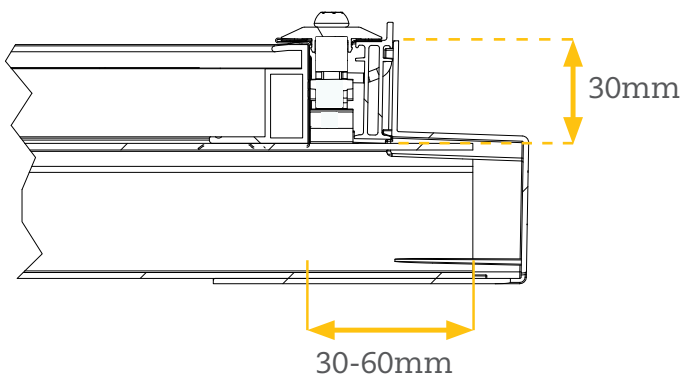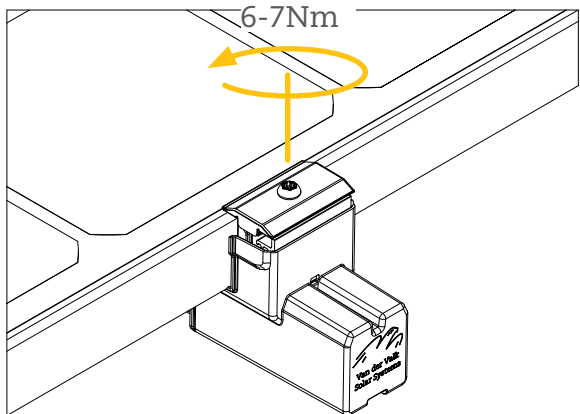


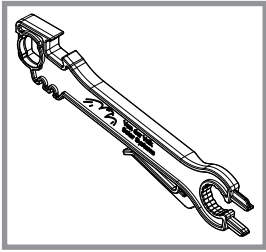


739065
ValkAce Disassembly
tool


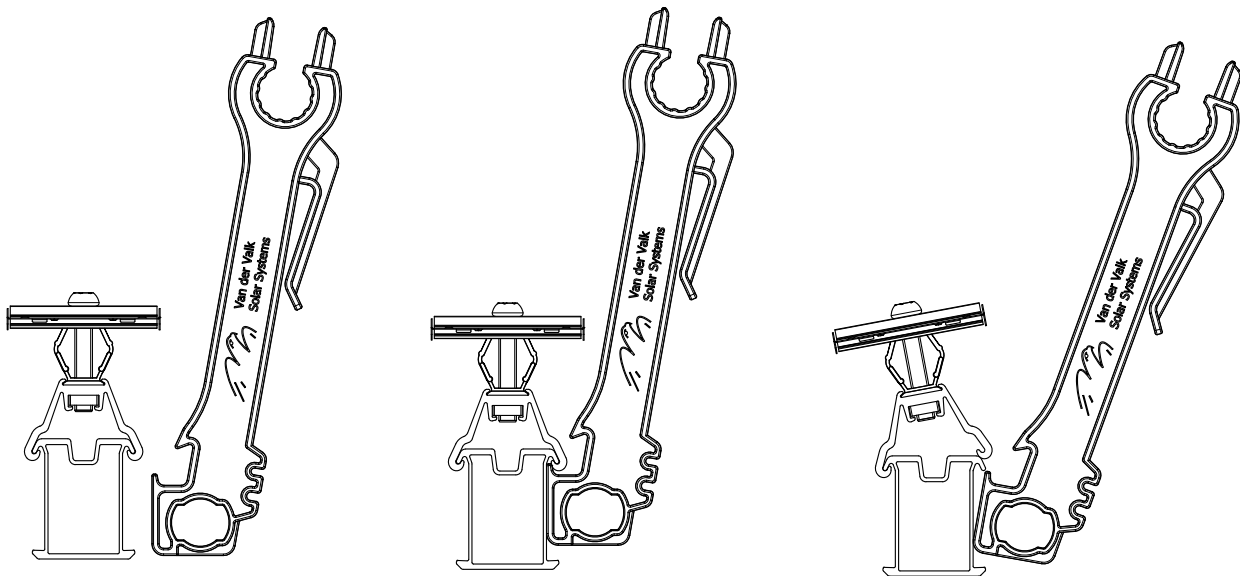


The ValkAce middle/end clamps can be disassembled with the disassembly tool (739065). Slightly lift the clamp on one side with your thumb so that it easily detaches from the profile using the disassembly Tool

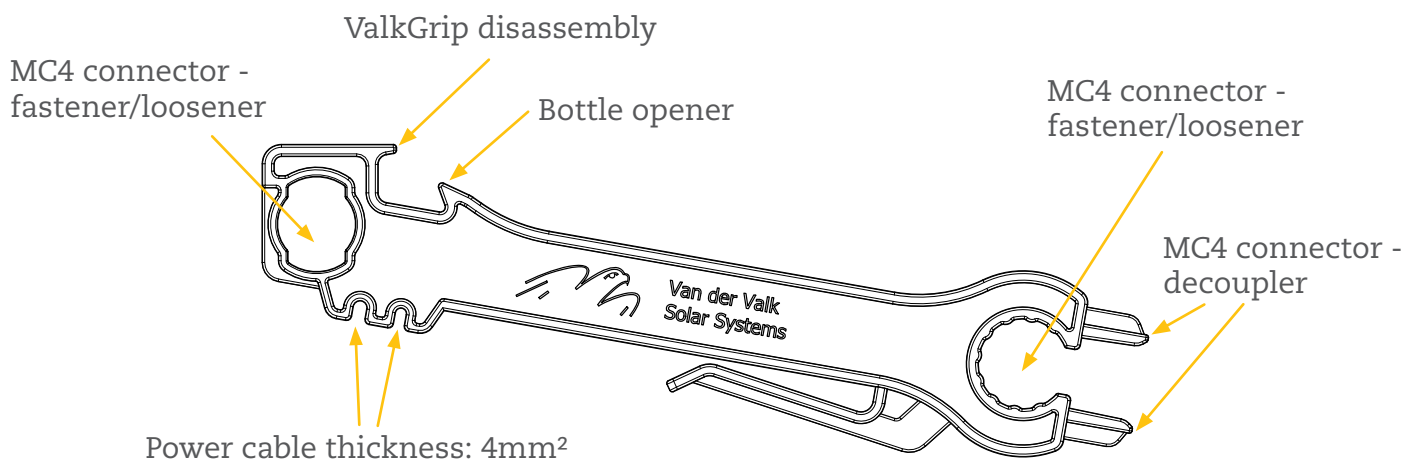

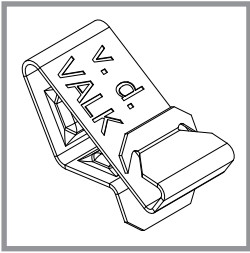

732001
SS cable clamp
small

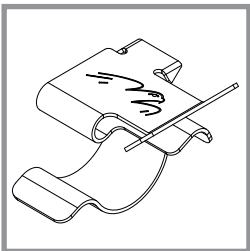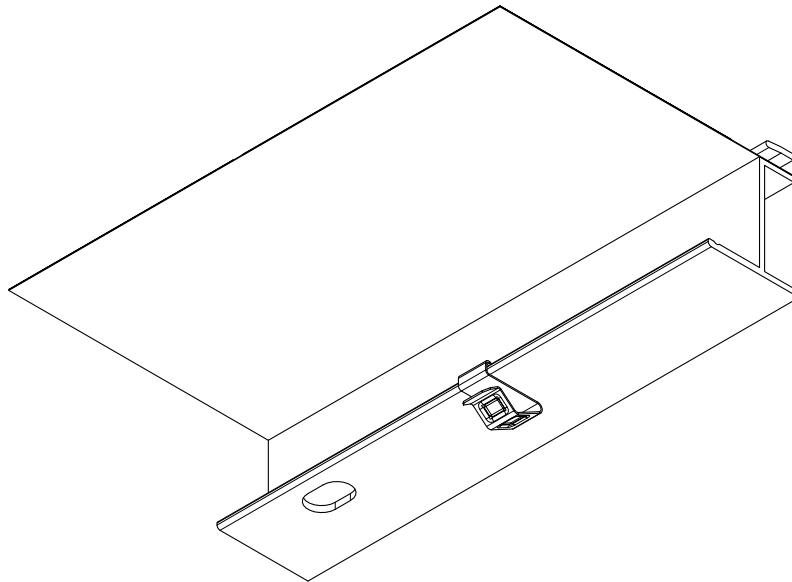

738201
Ss. Connector
clamp

